




Model: AV-1481

10x 4k HDMI PTZ Camera w/Auto Tracking

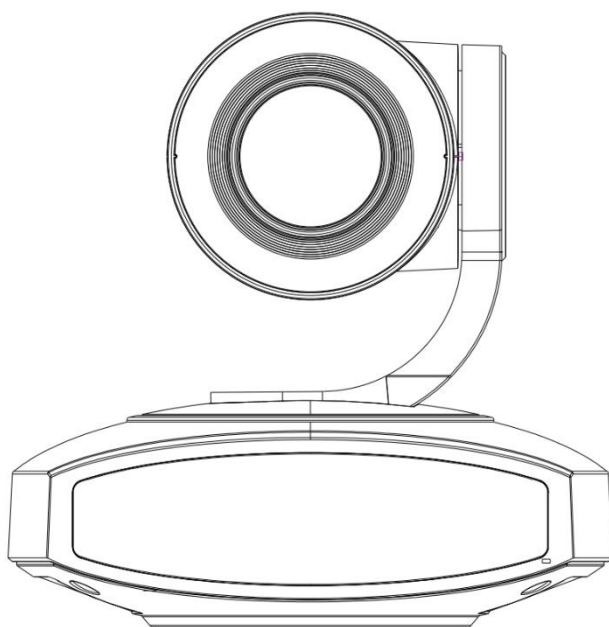

User Manual

V1.0

**Please read this user manual
thoroughly before using.**

www.avipas.com

Preface

This manual is to ensure that the user can use the product properly and avoid danger while operating. Before using this product, please read the user manual carefully and keep it properly for future reference

Overview

This manual is about AV-1481 PTZ camera operation

Graphic Symbols

Description of graphic symbols used in this manual

Symbols	Description
 Illustration	This symbol indicates that the words are clarification or supplement to this article.
 Caution	This symbol indicates that negligence of the instructions may lead to mishandling that may cause injury or property damage.
 Danger	This symbol indicates a risk that may result in damage to this machine or documents. Follow the instructions to avoid property damage.

Attention

This manual introduces functions, installations and operations for this product in detail. Please read this manual carefully before installation and use.


Precautions

This product can only be used in the specified conditions in order to avoid any damage to the camera:

- 1) Do not expose the product to rain or moisture.
- 2) To prevent the risk of electric shock, do not open the case. Installation and maintenance should only be carried out by qualified technicians.
- 3) Do not use the product beyond the specified temperature, humidity or power supply specifications.
- 4) Please use soft dry cloth to clean the camera. If the camera is very dirty, clean it with diluted neutral detergent; do not use any type of solvents, which may damage the surface.

Electrical Safety

- 1) When installing and using the product, it is essential to strictly adhere to national and local electrical safety standards.
- 2) Do not use a power adapter that exceeds the power specifications, as this may cause damage to the device components and prevent normal operation.
- 3) During product use, maintain a sufficient distance from high-voltage equipment and implement necessary protection against lightning and surges when necessary.
- 4) When the product is not in use, please turn off the power switch and disconnect the power adapter from the power outlet.
- 5) The product uses a 12V DC power supply, with the polarity of the power plug as shown in the diagram on the right.

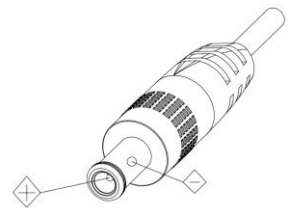

Transportation


Avoid any stress, vibration, or moisture during transportation, storage, installation and operation

Installation

- 1) Do not rotate the camera head violently, otherwise it may cause mechanical failure;
- 2) This product should be placed on a stable desktop or other horizontal surface. Do not install the product obliquely, otherwise it may display inclined image;
- 3) Ensure there are no obstacles within rotation range of the holder.
- 4) Do not power on before complete installation.

Improper operation may damage the product's structure and cause abnormal camera operation.

Please pay attention to the following operations:

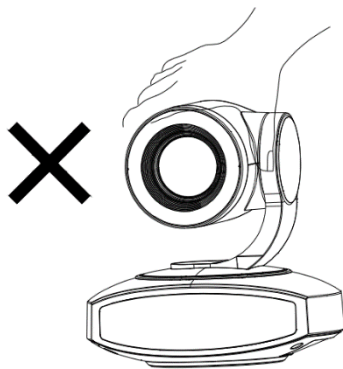

When moving the camera, do not grab the lens barrel by hand;



Please use both hands or one hand to hold the bottom to move the camera.



Do not shake the lens and gimbal by hand, whether the power is on or off. Otherwise, it may damage the gimbal, cause abnormal self-check of the camera and preventing normal startup.



Do Not Dismantle Camera

We are not responsible for any unauthorized modification or dismantling.

Magnetic Interference

Electromagnetic fields at specific frequencies may affect the video image. This product is Class A. It may cause radio interference in household applications. Appropriate measures are required.

Content

1. Quick Start	1
1.1 Interface.....	1
1.2 Power-on Self-Test	1
1.2.1 Power on	1
1.2.2 Self-Test.....	1
1.3 Video Output	2
1.3.1 LAN Output.....	2
1.3.2 HDMI Output	2
1.3.3 USB3.0 Output	2
Bracket	3
1.3.4 Steps of Wall Mount	3
1.3.5 Steps of Ceiling Mount	4
2. Product Overview	5
2.1 Product Overview	5
2.1.1 Product Dimension	5
2.1.2 Accessory	5
2.2 Product Feature	6
2.3 Technical Specification	7
2.4 Interface Introduction	9
2.4.1 Interface Diagram	9
2.4.2 RS-232.....	10
3. How to Use	12
3.1 Video Output	12
3.1.1 Power-on Self-test	12
3.1.2 Video Output	12
3.2 Remote Control.....	13
3.2.1 IR Remote Control	14
3.2.2 Remote Control Usage	16
3.3 Menu Setting	18
3.3.1 Main Menu	18
3.3.2 Monocular Tracking	19
3.3.3 System Setting	19

3.3.4 Camera Parameter Setting	20
3.3.5 P/T/Z	23
3.3.6 Network Settings	24
3.3.7 Video Format	24
3.3.8 Version	25
3.3.9 Restore Default	25
4. Network Connection	26
4.1 Connection Method	26
4.2 Camera Web Interface	28
4.2.1 Web Login	28
4.2.2 Preview	28
4.2.3 Configuration	29
4.2.4 Audio Configuration	29
4.2.5 Video Configuration	30
4.2.6 Network Configuration	34
4.2.7 System Configuration	36
4.2.8 Logout	38
4.2.9 Monocular Tracking	38
5. Serial Port Communication Control	40
5.1 VISCA Protocol List	40
5.1.1 VISCA Protocol List	40
5.1.2 Device Control Command	41
5.1.3 Inquiry Command	48
5.2 Pelco-D Protocol Command List	51
5.3 Pelco-P Protocol Command List	52
6. Maintenance and Troubleshooting	54
6.1 Camera Maintenance	54
6.2 Troubleshooting	54

1. Quick Start

1.1 Interface

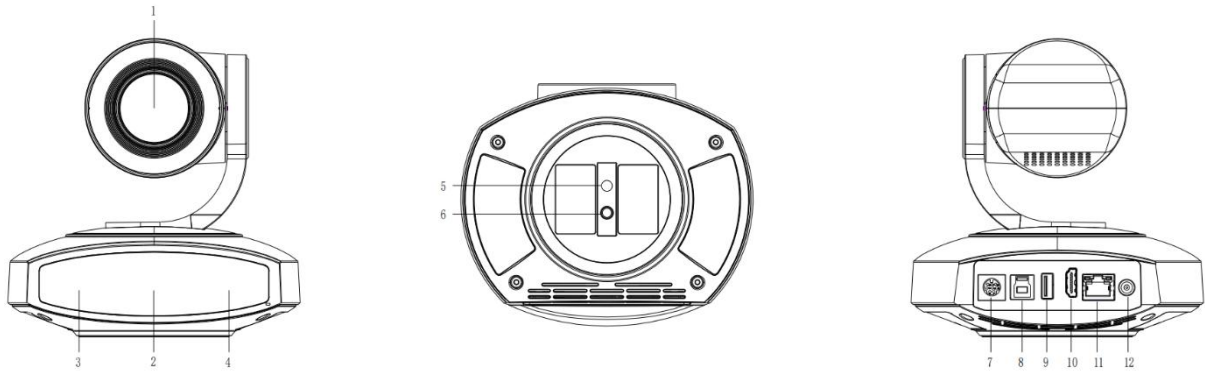


Figure1-1 Interface

Interface:

- | | | |
|--------------------|-----------------------------|--------------------------------|
| 1. Lens | 5. Fixation Hole for Tripod | 9. USB2.0 |
| 2. Power Indicator | 6. Screw Hole for Tripod | 10. HDMI Output |
| 3. IR Receiver | 7. RS232 | 11. Network Interface |
| 4. IR Receiver | 8. USB3.0 Output | 12. Power Input Socket (DC12V) |

1.2 Power-on Self-Test

1.2.1 Power on

Connect device to power socket with DC12V power adapter.

1.2.2 Self-Test

After powering on, the remote control receiver indicator flashes, and the gimbal rotates left to the far left, then up to the top, and then moves to the HOME position (both horizontally and vertically in the middle position), while the core first retracts and then extends; when the remote control receiver indicator stops flashing, it indicates that the self-check is completed.



Caution

- Default address of the remote control is 1#. When menu restore default setting, the address of IP remote control will restore 1#.
 - If preset 0 is set, the camera will return to the preset 0 position after self-test
-

1.3 Video Output

This series camera can output video through LAN, HDMI and USB3.0.

1.3.1 LAN Output

a, Network connection: Connect the camera to your laptop using an Ethernet cable. Make sure that the camera and laptop are connected to the same local network.

By default, the camera's IP address is **192.168.5.163**. To communicate with the camera, your laptop must be under the same local network as the camera.

To set up your laptop IP address, please make sure:

- The **first three sections** are the same as the camera's: **192.168.5.xxx**
- The **last section** is different from the camera's and is not already being used by another device.

For Example: Camera IP address: 192.168.5.163; Laptop IP address: 192.168.5.100

b, Log in: You can reach the Web Interface by typing in the camera's IP address (default 192.168.5.163) into a web browser. To log in, type in "admin" into the username and password fields. From the Web Interface, you can adjust many of your camera's settings via this IP interface, like PTZ control, and configuration setting.

1.3.2 HDMI Output

a, HDMI connection: Shown as diagram 1.1 #10

b, Connect camera to the display device via HDMI cable.

1.3.3 USB3.0 Output

USB3.0 connection: Shown as diagram 1.1 #11. Open video software and select image devices to output video.

Bracket

Caution

- Brackets can only be wall mounted or upside down mounted on template and concrete wall, but cannot be installed on plasterboard.

1.3.4 Steps of Wall Mount

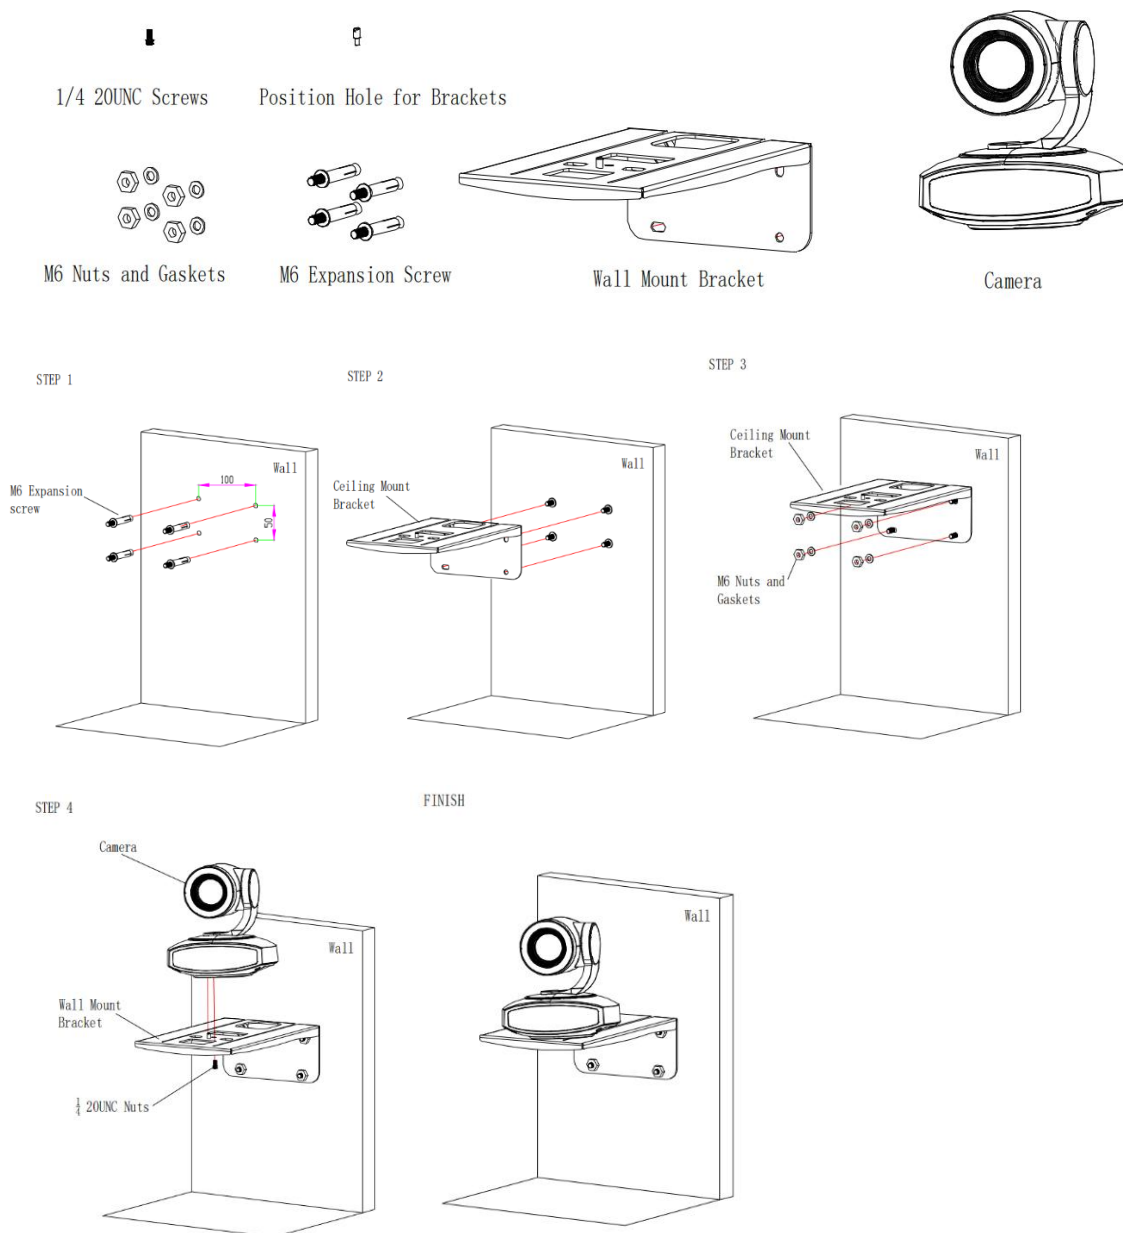


Figure1-2 Steps of Wall Mount

1.3.5 Steps of Ceiling Mount

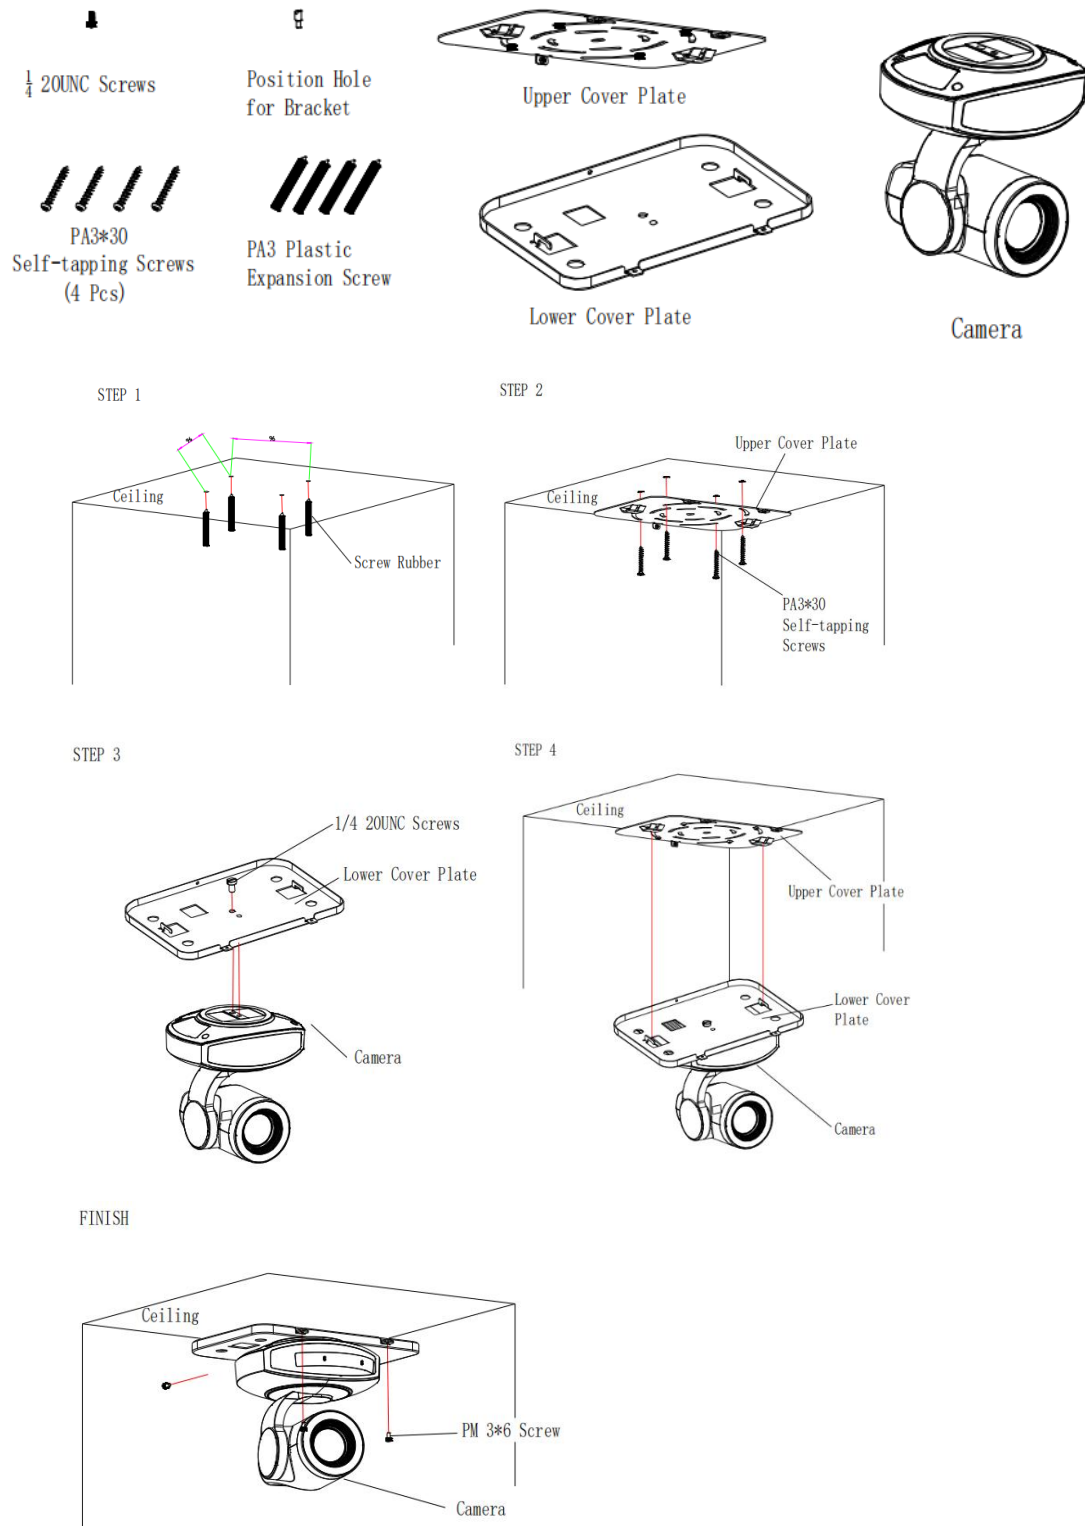


Figure1-3 Steps of Ceiling Mount

2. Product Overview

2.1 Product Overview

2.1.1 Product Dimension

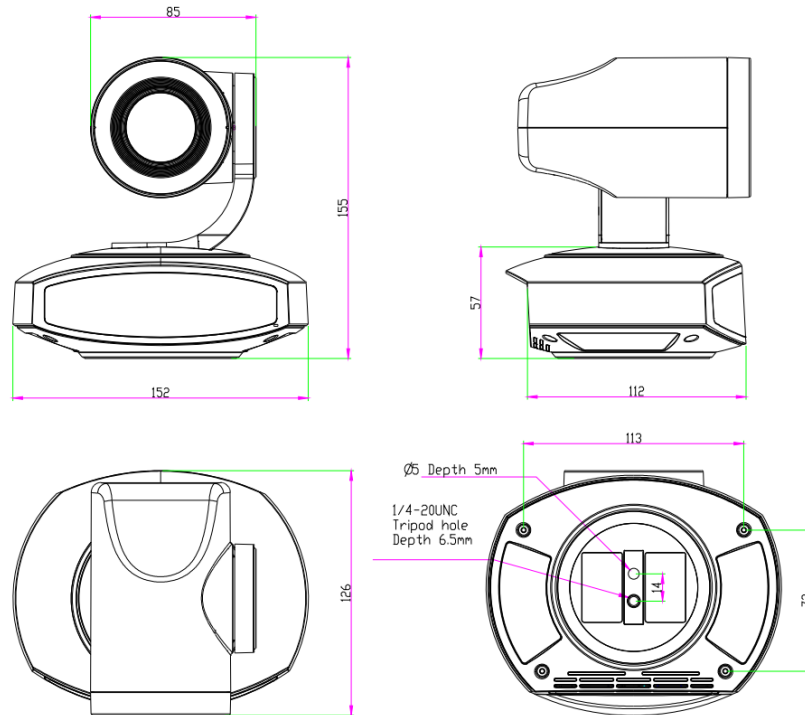


Figure 2-1 Product Dimension

2.1.2 Accessory

When you unpack your package, check that all the supplied accessories are included:

Table2-1 Supplied Accessory

Device Model	Accessories
AV-1481	Power adapter
	USB3.0 Type A to Type B
	User manual
	RS232 Cable
	IR Remote Control

2.2 Product Feature

The ultra HD camera series has complete functions, excellent performance, and rich interfaces; advanced ISP processing technology and algorithms make the image effect vivid, uniform picture brightness, strong light and color layering, high definition, and color reproduction. It supports H.265/H.264 encoding, making the picture smoother and clearer under low bandwidth.

- **4K UHD Resolution:** 8.42 megapixel high-quality SONY CMOS image sensor, the maximum resolution can reach 4K (3840×2160) at 30 frames per second. True-to-life Ultra HD video that vividly shows the expressions and movements of characters, delivering image quality with superb clarity and resolution.
- **Optical Zoom Lens:** 10X optical zoom 67.5°wide-angle lens.
- **Leading Auto Focus Technology:** Fast, accurate and stable auto focusing technology.
- **Low Noise and High SNR:** Super high SNR image is achieved with low noise CMOS. Advanced 2D/3D noise reduction technology further reduces the noise while ensuring high image clarity.
- **Multiple Video Output Methods:** Support HDMI, USB3.0, LAN;
- **Multiple Video Compression:** Support YUY2, MJPEG, H264, H265, NV12 video encoding formats, MJPEG, H264, H265 support up to 3840×2160 resolution 30 frames/second compression;
- **Audio Input Interface:** Support AAC audio encoding; Support 8000, 16000, 32000, 44100, 48000 sampling rates.
- **Built in Gravity Sensor:** Built in Gravity Sensor.
- **Multiple Network Protocol:** Support ONVIF, RTSP, RTMP, IP VISCA, RTMPS, SRT protocols; Support RTP multicast mode.
- **PoE supported:** Provide simple and quick installation.
- **Control Jack:** RS232-IN
- **Multiple Control Protocol:** Support VISCA, PELCO-D, PELCO-P protocols, Support automatic identification protocols.
- **Super Silent PTZ:** Utilizing high-precision stepper motors and a precision motor drive controller to ensure smooth operation at low speeds and minimal noise.
- **Low Power Sleep Mode:** Support low power sleep/awake mode, and the power consumption is less than 400mW.
- **Multiple Presets:** Up to 255 presets (10 presets via remote control).
- **Various Remote Controls:** Users can choose between an infrared remote control or a wireless remote control based on the environmental conditions. The 2.4G wireless remote control is not affected by angles, distances, or infrared interference. It supports remote control signal transmission, making it convenient for backend device use.
- **AI Human Detection:** Equipped with a high-speed processor and exclusive advanced image processing and analysis algorithms, users can choose real-time tracking or area tracking based on the usage environment. They can switch tracking objects by selecting the person's object box through the webpage.
- **Versatile Applications:** Suitable for remote education, teaching recording, conference systems, remote training, remote medical care, courtroom systems, emergency command systems, etc.

2.3 Technical Specification

Table2-2 Camera Lens Parameter

Parameter	10X
Device, Lens Parameter	
Image Sensor	1/2.8 inch high quality CMOS sensor
Effective Pixel	8.42M, 16:9
Video Signal	HDMI: 4KP30,4KP25,1080P60,1080P50,1080P30,1080P25,720P60,720P50,1080P59.94,1080P29.97,720P59.94 LAN: Main Stream: 3840×1920/1920×1080/1280×720/640×480/640×360@30/25/20/15/10/5 fps; Sub Stream: 1920×1080/1280×720/640×480/640×360/320×240/320×180@30/25/20/15/10/5fps; USB 3.0: Main Stream:YUY2/NV12: 1920×1080/1280×720/1024×576/800×600/800×448/640×360/640×480/480×270/320×180@30/25/20/15/10/5fps; MJPG/H264: 3840×2160/2560×1440/1920×1080/1600×896/1280×720/1024×576/960×540/800×600/800×448/720×576/720×480/640×360/640×480/480×270/352×288/320×240@30/25/20/15/10/5fps; Sub Stream:YUY2/NV12: 1920×1080/1280×720/1024×576/800×600/800×448/640×360/640×480/480×270/320×180@25/20/15/10/5fps; MJPG/H264: 1920×1080/1600×896/1280×720/1024×576/960×540/800×600/800×448/720×576/720×480/640×360/640×480/480×270/352×288/320×240@30/25/20/15/10/5fps; Notes: 1. USB and LAN do not support simultaneous 4K output. By default, USB outputs 4K. You can change it to LAN outputting 4K via Web Interface -> Video Output. 2. USB supports dual-stream output. This feature is disabled by default. It can be enabled via OSD -> Settings.
Optical Zoom	10X
Viewing Angle	H:7.6° (N) ~67.5° (W)
Focal Length	4.32 ~ 40.91 mm±5%

Iris Value	F1.76 ~ F3.0±5%
Digital Zoom	16 X
Minimum Illumination	0.5Lux(F1.8, AGC ON)
DNR	2D & 3D
White Balance	Auto/Manual/One-push/Specified color temperature
Focus Mode	Auto/Manual/One-push
Exposure Mode	Auto, manual, shutter priority, iris priority, brightness priority
Aperture	F1.8 ~ F11, CLOSE
Shutter Speed	1/25~1/20000
BLC	On/Off
Dynamic Range	Off, 1 ~ 8
Video Adjustment	Brightness, Contrast, Saturation, W&B Mode, Horizontal flip, vertical flip, Digital Zoom, Minimum Illumination
SNR	>50dB

Table2-3 Interface Parameter

Back Panel Overview	
Interface	HDMI, LAN(with POE), USB3.0, USB2.0, RS232-IN, DC12V Power Supply
Video Connection	HDMI, LAN, USB3.0
Video Compression Formats	LAN:H.264, H.265 USB 3.0:MJPEG, H264 , YUY2, NV12
Audio Compression Formats	AAC
LAN Port	Support POE; Support audio and video output
Network Protocols	RTSP, RTMP, ONVIF, VISCA OVER IP, IP VISCA, RTMPS, SRT
Control Interface	RS232-IN
Serial Port Communication Protocols	VISCA/Pelco-D/Pelco-P; Baud Rate 115200/38400/9600/4800/2400
USB Communication Protocols	UVC (Video Communication Protocols), UAC (Audio Communication Protocols)
Power Supply	HEC3800 Power Socket(DC12V)

Power Adapter	Input: AC110V~AC220V ; Output: DC12V/2.0A
Input Voltage	DC12V±10%
Input Current	<1.2A
Power Consumption	<13.3W

Table2-4 PTZ Parameter

PTZ Parameter	
Pan Move	-125°~+125°
Tilt Move	-30°~+30°
Pan Speed	0.1°/s~65°/s
Tilt Speed	0.1°/s~35°/s
Preset Speed	Pan: 65°/s, Tilt: 35°/s
Preset Quantity	Up to 255 preset (10 via remote control)

Table2-5 Other Parameter

Other Parameter	
Storage Temperature	-10°C~+70°C
Storage Humidity	20%~95%
Working Temperature	-10°C~+50°C
Working Humidity	20%~80%
Dimension	152mmX155mmX126mm
Weight	1.0kg
Environment	Indoors

2.4 Interface Introduction

2.4.1 Interface Diagram

The external interface diagram is shown in Figure 2-2:


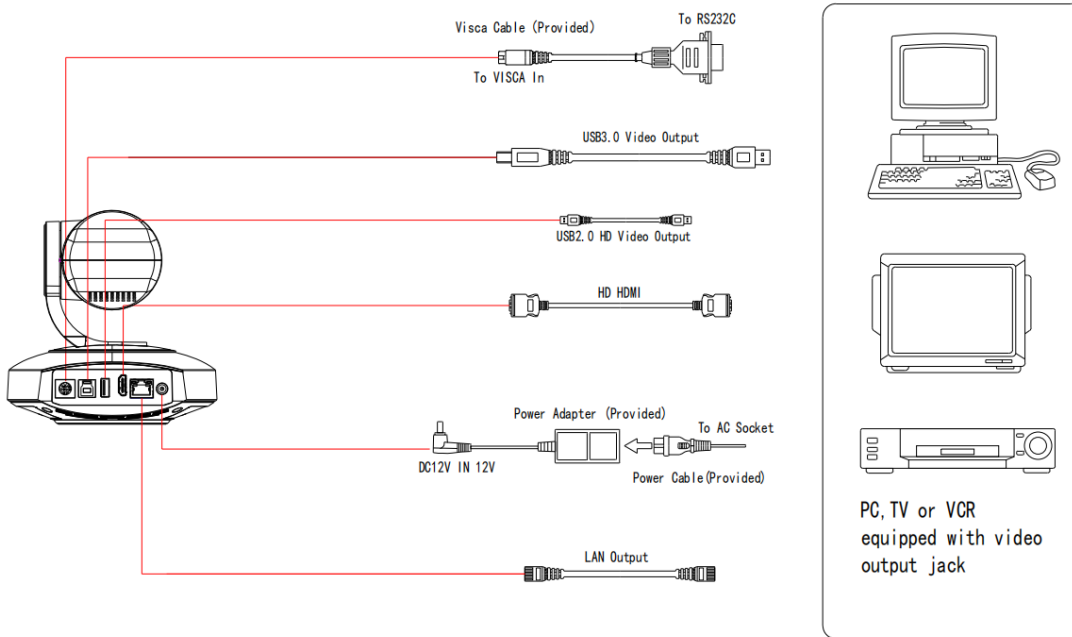


Figure 2-2 Interface Diagram

2.4.2 RS-232

1) RS-232 Diagram

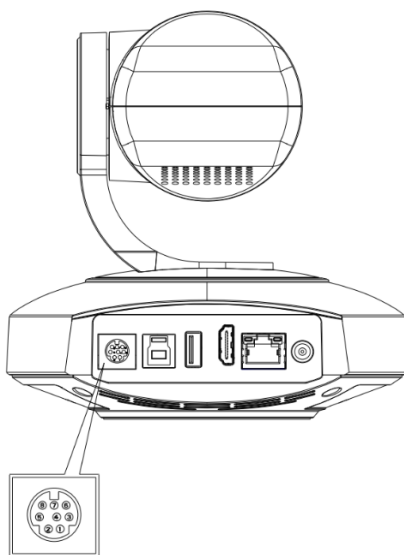

Methods to connect the computer or control keyboard to the device

Device	Windows DB-9
1.DTR	1.DCD
2.DSR	2.RXD
3.TXD	3.TXD
4.GND	4.DTR
5.RXD	5.GND
6.GND	6.DSR
7.IR OUT	7.RTS
8.NC	8.CTS
	9.RI



Figure 2-3 RS-232 Diagram

2) RS-232 Mini-DIN 8-pin Port Definition

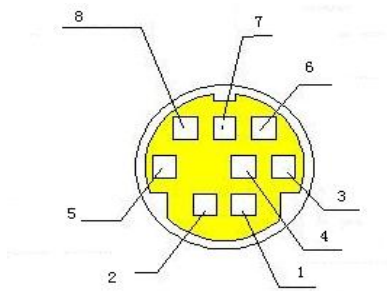


Table 2-7 RS-232 Mini-DIN 8-pin Port Definition

NO.	Port	Definition
1	DTR	Data Terminal Ready
2	DSR	Data Set Ready
3	TXD	Transmit Data
4	GND	Signal Ground
5	RXD	Receive Data
6	GND	Signal Ground
7	IR OUT	IR Commander Signal IR
8	NC	No Connection

3) RS232(DB9) Port Definition

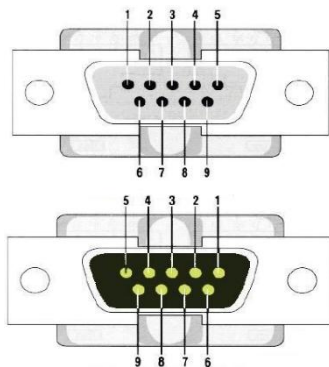


Table 2-8 RS232(DB9) Port Definition

NO.	Port	Definition
1	DCD	Data Carrier Detect
2	RXD	Receive Data
3	TXD	Transmit Data
4	DTR	Data Terminal Ready
5	GND	System Ground
6	DSR	Data Set Ready
7	RTS	Request to Send
8	CTS	Clear to Send
9	RI	Ring Indicator

4) VISCA The following figure shows the networking mode

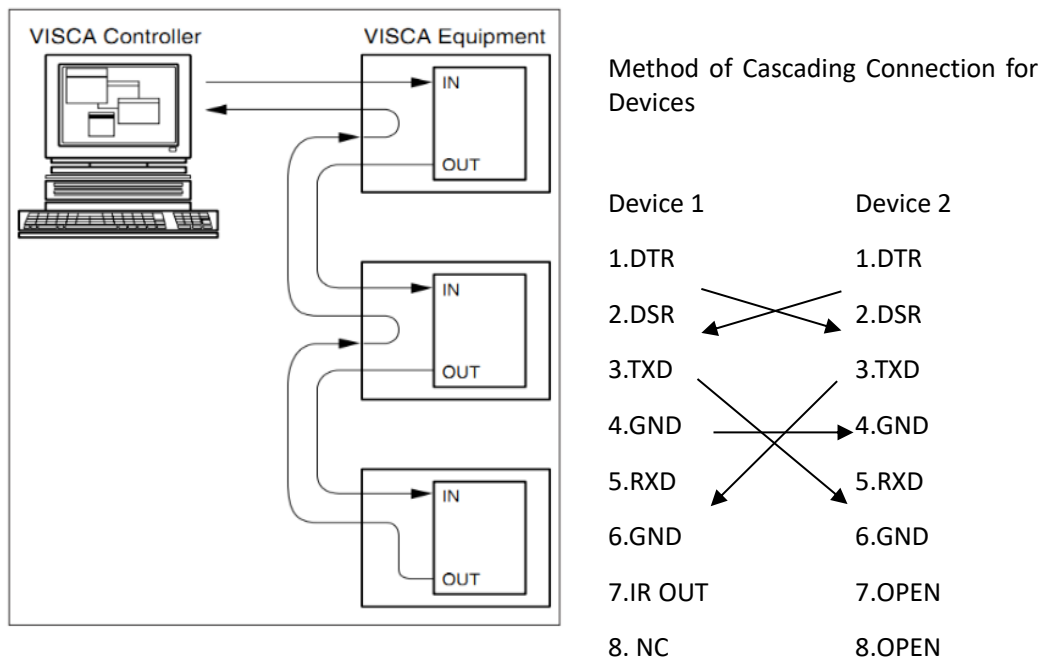


Figure 2-4 VISCA Schematic Diagram of Networking Configuration

⚠ Caution

- Note: The product is equipped with RS232 input and output interfaces, which can be cascaded according to the method described above.

3. How to Use

3.1 Video Output

3.1.1 Power-on Self-test

After powering on, camera will have initial configuration and receiver light will be flashing. Camera will do a brief pan-tilt tour and return to the home position, or if preset 0 is set, the camera will return to the preset 0 position)

3.1.2 Video Output

Connect the video output cable: Users can refer to section 1.1 for an introduction to various product output interfaces.

- 1) Network output: Connect this product and your computer through network cable, then open the browser, enter the camera IP address (factory default 192.168.5.163) in the address bar, then to the login page and input a user name and password (factory default are

“admin”) ,Finally enter the preview page, and the image comes out.

(Note: If you forget your user name, password, IP address, you can manually restore the default by the remote controller key combination * #)

2) HDMI Output: Connect the monitor with the corresponding video output interface.

3) USB3.0 Output: Connect this product with computer USB3.0 interface, open the Device Manager to see whether there is an image device and whether the Universal Serial Bus controllers recognize USB3.0 device. After properly identified, open the software, choose the image device and then it will output image.

3.2 Remote Control

Remote control using instruction: There are wireless remote control and IR remote control for options.

Steps for wireless remote control usage are as below:

1) Code Pairing

Press the "Settings" + "*" button for 3 seconds, the LED will turn off to flashing, after releasing the button, the LED light will keep flashing to start the code pairing, the receiver is powered on, and the LED will be off when the code pairing is successful; If you use other remote control, you need to clear the code of this remote control, or re-pair the code of the new remote control. If the code pairing has been unsuccessful, the red LED light flashes for 20 seconds and then goes out, stop the code pairing and go to sleep; at this time, press any key to wake up and re-pair the code.

Caution

- After the code is successfully matched, you need to select the camera address to control it

2) Clear Code Data

Press the "Settings" key + "#" key from light off to flashing, the receiving end is powered off and then powered on. The LED is off, indicating that the paired data is cleared successfully

3) Enter Sleep Mode and Wake Up

If there is no operation in the working state, it will immediately enter the sleep mode, and press any key to wake up.

3.2.1 IR Remote Control



1. Standby Key

After 3S long press, the camera will step into standby mode. Long press 3S again, the camera will self-test again and back to HOME position. (Note: If power-on mode is turned on and Preset 0 is set, and there is no operation within 12s, it will automatically point to the specified preset position.

2. Camera Address Selection

Select the camera address which wants to be controlled

3. Number Key

Set or run 0-9 presets

4, *, # Key

Key combination use

5. Focus Control Key

Auto Focus: Enter into auto focus mode.

Manual Focus: The camera focus mode is manual. Switch the camera focus mode to manual focus by pressing [focus +] or [focus -] to adjust.

6. Zoom Control Key

Zoom + :Lens near Zoom – :Lens far

7. Set or Clear Preset key:

Set Preset: Set preset key + 0-9 number key:

Clear Preset key: Clear preset key + 0-9 number key

8. Pan/Tilt Control Key

Press ▲ Key: Up Press ▼ Key: Down

Press ◀ Key: Left Press ▶ Key: Right

“HOME” Key: Return to the middle position or enter into the next level menu

9. BLC Control Key

Back Light ON/OFF: Turn on or off the back light

10. Menu Setting

Open or close the OSD menu

Enter/exit the OSD menu or return to the previous menu.

11. Camera IR Remote Control Address Setting

【*】 + 【#】 + 【F1】 : Camera Address No.1

【*】 + 【#】 + 【F2】 : Camera Address No. 2

【*】 + 【#】 + 【F3】 : Camera Address No. 3

【*】 + 【#】 + 【F4】 : Camera Address No. 4

12. Key Combination Functions

【#】 + 【#】 + 【#】 : Clear all presets

【#】 + 【#】 + 【0】 : Switch the video to 4KP30

【*】 + 【#】 + 【6】 : Restore factory defaults

【#】 + 【#】 + 【1】 : Switch the video to 4KP25

【*】 + 【#】 + 【3】 : Menu set to Chinese

【#】 + 【#】 + 【2】 : Switch the video to 1080P60

【*】 + 【#】 + 【4】 : Menu set to English

【#】 + 【#】 + 【3】 : Switch the video to 1080P50

【*】 + 【#】 + 【9】 : Flip switch

【#】 + 【#】 + 【4】 : Switch the video to 1080P30

【*】 + 【#】 + Auto: Enter into the aging mode

【#】 + 【#】 + 【5】 : Switch the video to 1080P25

【#】 + 【*】 + Auto: Stop aging mode

【#】 + 【#】 + 【6】 : Switch the video to 720P60

【*】 + 【#】 + Manual: Restore the default user name, password, and IP address

【#】 + 【#】 + 【7】 : Switch the video to 720P50

【#】 + 【#】 + 【8】 : Switch the video to 1080P59

【#】 + 【#】 + 【9】 : Switch the video to 1080P29

13. AI Function Short Keys



【F1】 : Turn off AI Human Detection

【F2】 : Turn on AI Human Detection

【F3】 : Toggle between real time tracking mode and region tracking mode

【F4】 : Chang tracking target on real tracking mode


3.2.2 Remote Control Usage

Finishing initialization, it can receive and execute the IR commands. Press the remote controller button, the indicator light is flashing; release the button, the indicator light stops flashing. Users can control the pan/tilt/zoom, setting and running preset positions via the IR remote controller.

Key Instruction:

1. In this instruction, “press the key” means a click rather than a long-press, and a special note will be given if a long-press for more than one second is required.
2. When a key-combination is required, do it in sequence. For example, “ **【*】** + **【#】** + **【F1】** ” means press “ **【*】** ” first and then press “ **【#】** ” and last press “ **【F1】** ”

1) Camera Selection

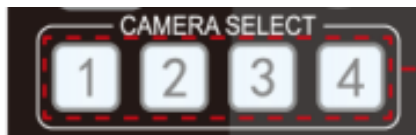

Select the camera address to control.

2) Pan/Tilt Control




Up: press ▲ Down: press ▼

Left: press ◀ Right: press ▶

Back to middle position: press “ **【HOME】** ”

Press and hold the up/down/left/right key, the pan/tilt will keep running, from slow to fast, until it runs to the endpoint; the pan/tilt running stops as soon as the key is released. Once tracking is enabled, the [▼] and [▶] keys can be used to switch between tracking targets

3) Presets Setting, Running, Clearing

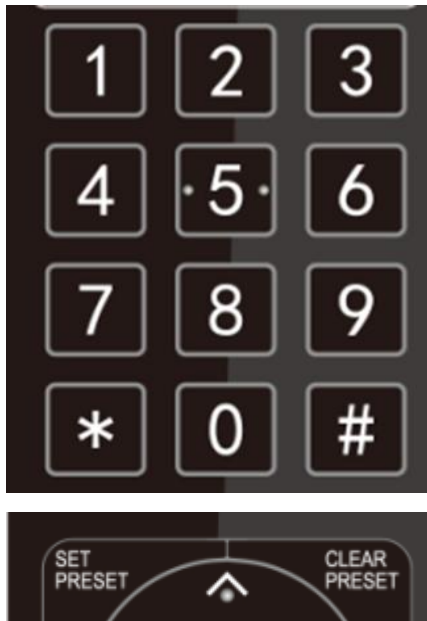

1. Preset setting: to set a preset position, the users should press the “ **【SET PRESET】** ” key first and then press the number key 0-9 to set a relative preset,

Note: 10 preset positions in total are available by remote controller.


2. Preset Running: Press a number key 0-9 directly to run a relative preset.

Note: Action in vain if a relative preset position is not existed.

3. Preset clearing : to clear a preset position, the user can press the “ **【CLEAR PRESET】** ” key first and then press the number key 0-9 to clear the relative preset;

Note : press the“ **【#】** ” key three times continually to cancel all the presets.

4) Zoom Control

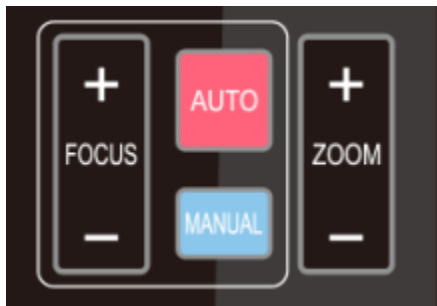

ZOOM IN: press “ZOOM+ ” key

ZOOM OUT: press “ZOOM- ” key

Press and hold the key, the camera will keep zooming in or zooming out and stops as soon as the key is released.

5) Focus Control



Focus (near):Press “ **【focus+】** ” key (Valid only in manual focus mode)


Focus (far): Press “ **【focus-】** ”key (Valid only in manual focus mode)

Auto Focus: Support

Manual Focus: Support

Press and hold the key, the action of focus will keep continue and stops as soon as the key is released.

6) Camera Remote Controller Address Setting

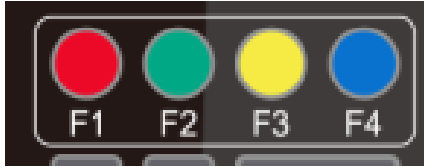

【*】 + 【#】 + 【F1】 :Camera Address No.1

【*】 + 【#】 + 【F2】 :Camera Address No. 2


【*】 + 【#】 + 【F3】 :Camera Address No. 3

【*】 + 【#】 + 【F4】 :Camera Address No. 4

3.3 Menu Setting

3.3.1 Main Menu

In normal working mode, press 【MENU】 key to display the menu, using scroll arrow to point at or highlight the selected items.

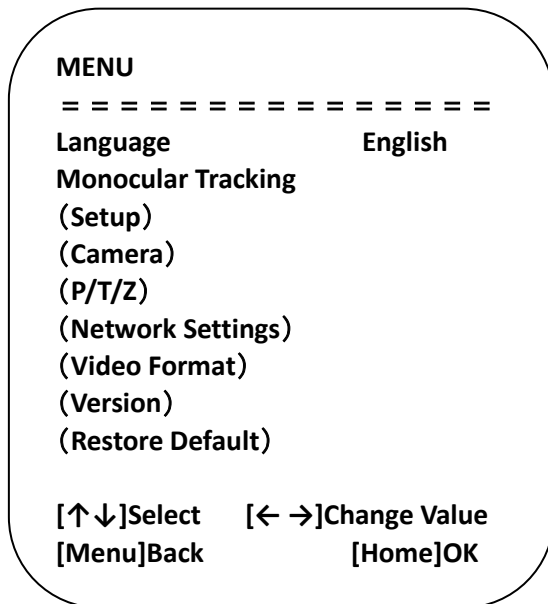

Language:

Chinese/English

Setting: Enter into submenu of system setting

P/T/Z: Enter into submenu of version

Monocular Tracking: Enter the single-eye tracking settings submenu.

Camera Parameter: Enter into submenu of camera parameter

Version: Enter into submenu of version

Restore Factory Default: Select Yes or No to restore factory default.

[↑↓]Select: Press [↑↓] to Select menu


[Menu]Return: Press [Menu] to return

[← →] Revise: Press [← →] to revise parameter

[Home] Confirm: Press [Home] to confirm

Network Settings: Enter into submenu of network

3.3.2 Monocular Tracking

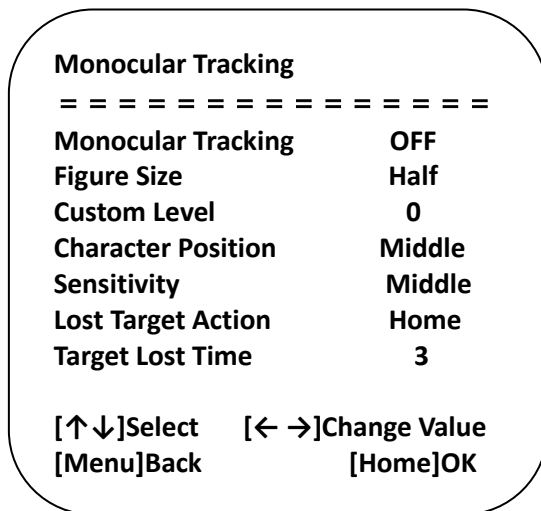

Monocular Tracking: Off/Real-time Tracking/Stage Tracking/Area Tracking /Auto Framing

Figure Size: Full Body/Half Body/ Close-up/Custom

Custom Level: 0 - 5

Character Position: Left/Center/Right

Sensitivity: High/Medium/Low

Target Loss Action: Home/Preset 0/Last Lost Position

Target Loss Time: 0 – 60s

3.3.3 System Setting

Move the pointer to the (Setup) in the Main Menu, click the **【HOME】** key and enter into the (System Setting) as shown below

SETUP

=====

Protocol	Auto
Visca Address	1
Visca Address Fix	OFF
PELCO-P Address	1
PELCO-D Address	1
Baudrate	9600
USB Dual Stream	OFF
Auto Flip	ON

[↑↓]Select [← →]Change Value
[Menu]Back

PROTOCOL: VISCA/Pelco-/Pelco-D/Auto

Visca ADDR: VISCA=1~7 Pelco-P=1~255
Pelco-D = 1~255

Baud Rate: 2400/4800/9600/115200

Visca Address Fix: On/Off

USB Dual Stream: On/Off

Auto Flip: On/Off

3.3.4 Camera Parameter Setting

Move the pointer to the (CAMERA) in the Main Menu, click the **【HOME】** key and enter the (CAMERA) as follow

CAMERA

=====

(Exposure)
(Color)
(Image)
(Focus)
(Noise Reduction)

Style	Default
-------	---------

[↑↓]Select [← →]Change Value
[Menu]Back [Home]OK

Exposure: Enter into Exposure setting

Color: Enter into color setting

Image: Enter into image setting


Focus: Enter into focus setting

Noise Reduction: Enter into noise reduction

Style: Default, standard, clear, bright, soft

1) Exposure

Move the pointer to the (EXPOSURE) in the Main Menu, click the **【HOME】** and enter the (EXPOSURE SET) as follow

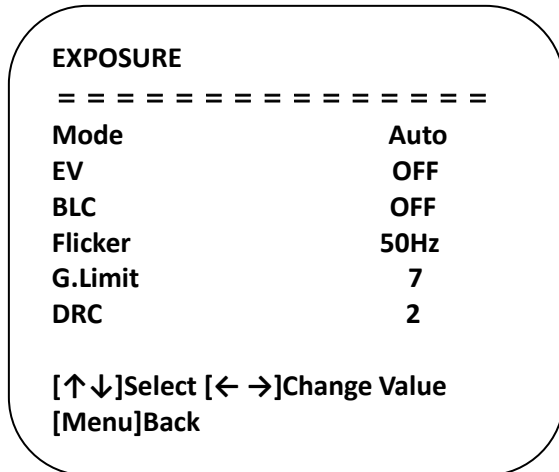

Mode: Auto, Manual, Shutter priority, Iris priority and brightness priority.

EV: On/Off (only available in auto mode)

Compensation Level: -7~7 (only available in auto mode when EV is ON)

BLC: ON/OFF for options (only available in auto mode)

Anti-Flicker: OFF/50Hz/60Hz for options (only available in Auto/Iris **priority**/Brightness **priority** modes)

Gain Limit: 0~15(only available in Auto/ Iris **priority** /Brightness **priority** mode)

WDR: Off, 1~8

Shutter: 1/25, 1/30, 1/50, 1/60, 1/90, 1/100, 1/120, 1/200, 1/250, 1/350, 1/500, 1/1000, 1/2000, 1/3000, 1/4000, 1/6000, 1/10000, 1/20000 (only available in Manual and Shutter priority mode)


IRIS: OFF, F11.0, F9.6, F8.0, F6.8, F5.6, F4.8, F4.0, F3.4, F2.8, F2.4, F2.0, F1.8 (only available in Manual and Iris priority mode)

Brightness: 0~20 (only available in Brightness **priority** mode)

Gain: Adjustable range: 0 to 15 (Only applicable in manual mode, effective when in shutter priority mode)

2) Color

Move the pointer to the (COLOR) in the Main Menu, click the **【HOME】** and enter the (COLOR SET) as follow

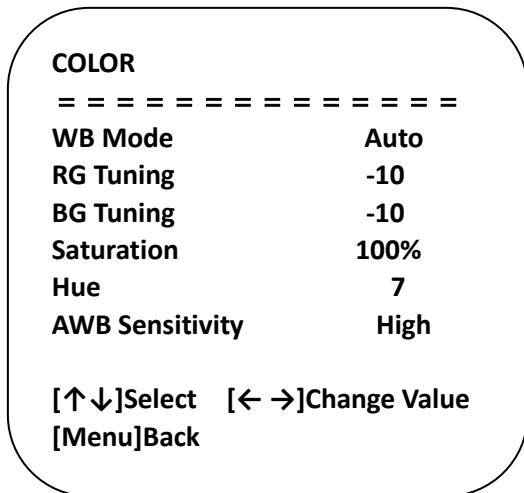

WB Mode: Auto, Manual, One-touch White Balance, Specified Color Temperature

Saturation: 0-127

Red Tuning: -10~10(only available in Auto mode)

Blue Tuning: -10~10(only available in Auto mode)

Red Gain: 0~255(only available in Manual mode)

Blue Gain: 0~127(only available in Manual mode)


AWB Sensitivity: high/middle/low (only available in Auto mode)

Hue: 0~8

Color Temperature: 2400K-7100K (Only valid in specified color temperature)

3) IMAGE

Move the pointer to the (IMAGE) in the Menu, click the **【HOME】** and enter the (IMAGE) as follow

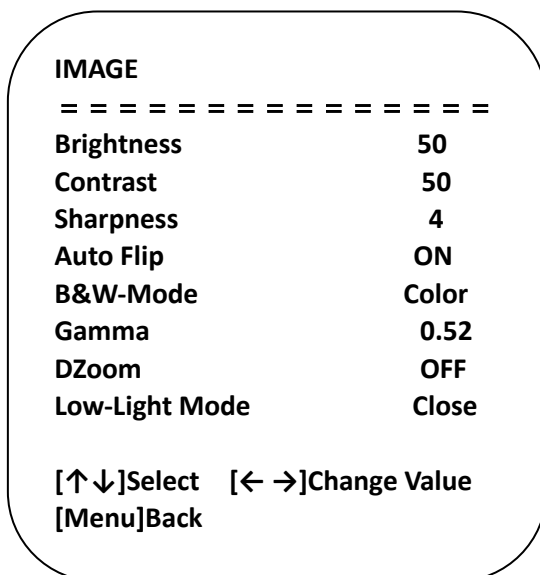

Brightness: 0~100

Contrast: 0~100

Sharpness: 0~15

Horizontal flip: On/Off

Vertical flip: On/Off

B&W Mode: Color, black/white


DZoom: On/Off

Gamma Curve: Default, 0.45, 0.50, 0.55, 0.63

Low-light Mode: On/Off

4) Focus


Move the pointer to the (FOCUS) in the Menu, click the **【HOME】** and enter the (FOCUS) as follow.

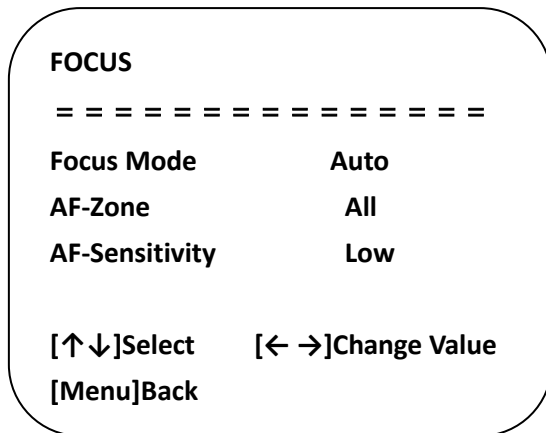

Focus Mode: Auto/Manual **AF-Zone:** Up/middle/down **AF-Sensitivity:** High/middle/low

5) Noise Reduction

Move the pointer to the (NOISE REDUCTION) in the Menu, click the **【HOME】** and enter the (NOISE REDUCTION) as follow

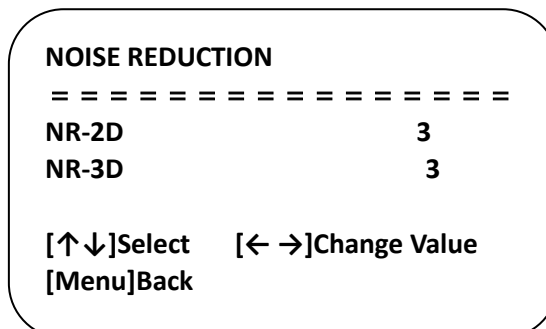

2D Noise Reduction: Auto, OFF, 1~7

3D Noise Reduction: Auto, OFF, 1~7

3.3.5 P/T/Z

Move the pointer to the (P/T/Z) in the Main Menu, click the **【HOME】** and enter the (P/T/Z) as follow

P/T/Z	
=====	
Speed by Zoom	ON
Zoom Speed	8
Image Freezing	OFF
Acc Curve	Slow
Preset Speed	10
[↑↓]Select [←→]Change Value	
[Menu]Back	

Depth of Field: Only effective for remote controller, On/ Off;

When zoom in, the Pan/Tilt control speed by remoter will become slow

Zoom Speed: Set the zoom speed for remote controller, 1~8

Image Freezing: On/Off

Accelerating Curve: Fast/slow

Preset Speed: 1-10

3.3.6 Network Settings

Network Settings	
=====	
DHCP	OFF
IP Addr	192.168.5.163
Subnet Mask	255.255.255.0
Gateway	192.168.5.1
[↑↓]Select	
[Menu]Back	[Home]OK

Dynamic Protocol: On/Off


IP Address: Set the camera's IP address

Subnet Mask: Set the camera's subnet mask

Gateway: Set the camera's gateway

3.3.7 Video Format

Move the pointer to the (Video Format) in the Menu, click the **【HOME】** and enter the (Video Format) as follow

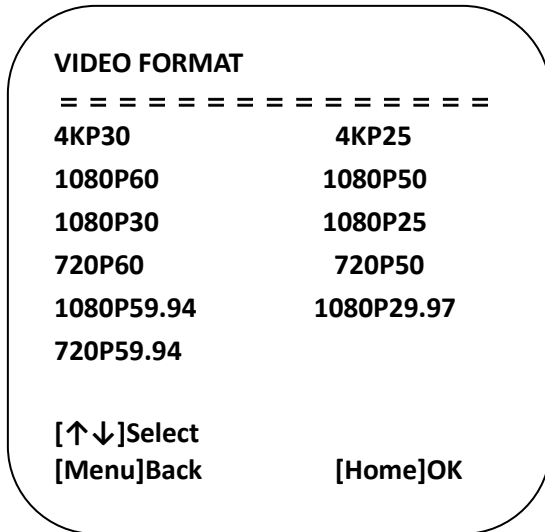


Caution

- Exit menu after modifying parameter to save it

3.3.8 Version

Move the pointer to the (VERSION) in the Main Menu, click the **【HOME】** and enter the (VERSION) as follow

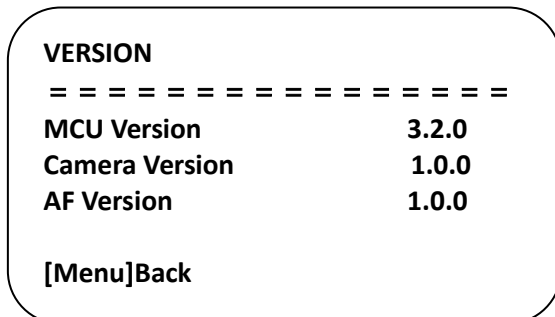

MCU Version: Display MCU version information

Camera Version: Display camera version information

AF Version: Display the focus version information

3.3.9 Restore Default

Move the pointer to the (VERSION) in the Main Menu, click the **【HOME】** and enter the (VERSION) as follow.

RESTORE DEFAULT

=====

Restore Default? NO

[↑↓]Select [← →]Change Value

[Menu]Back [Home]OK

Restore default: Yes/No ;(after restoring default, the language, color, and video format won't be restored)

Caution

Note: If the address of former remote is not 1 but another one from 2, 3, 4, the corresponding camera address will restore to 1 when all parameters or system parameters are restored. Users should change the remote address to be 1 (press No.1 according to the camera so to get normal operation)

4. Network Connection

4.1 Connection Method

Direct Connection: Connect the device directly to the computer using a network cable.

Network Connection Mode: Connect the device to the Internet network, which can be accessed through a router or switch. Users can log in to the device via a web browser

Caution

- Please do not put the power and network cable in places where can be easily touched to prevent video quality lowered by unstable signal transmission due to poor contact of cables.
-

The computer must have the network segment where the camera IP address belongs to. The device will not be accessible without the segment. I.E. The camera's default IP address is 192.168.5.163, then segment 5 must be added in the computer. Specific steps are as below:

Firstly, open the window of Local Area Connection Properties on computer, select the "Internet protocol version 4(TCP/IPv4)" as shown by picture on the left. Double click or click the property "Internet" protocol version 4 (TCP/IPv4)to enter the Internet Protocol Version 4(TCP/IPv4) Properties window, select "Advanced" to enter into the Advanced TCP/IP Setting and add IP and subnet mask in the IP browser as picture shown below. Click the "Confirm" to

finish the adding of IP segment. Users can add the corresponding network segment according to the revised IP address of the camera.

Caution

- The IP address to be added cannot be same as that of other computers or devices. The existence of this IP address needs to be verified before adding.

Click the “Start” and select “Operation” to input cmd as picture below to verify if the network segment has been successfully added.

```
C:\Users\Administrator>ping 192.168.5.26


Pinging 192.168.5.26 with 32 bytes of data:
Reply from 192.168.5.26: bytes=32 time<1ms TTL=128
Reply from 192.168.5.26: bytes=32 time<1ms TTL=128
Reply from 192.168.5.26: bytes=32 time<1ms TTL=128
Reply from 192.168.5.26: bytes=32 time<1ms TTL=128

Ping statistics for 192.168.5.26:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

C:\Users\Administrator>
```

Figure4-1 Network segment successfully added

Users can also to verify network connection as steps above mentioned after the finish of camera self-check. If IP is default, open DOS command window and input 192.168.5.163, then press Enter key. It will show message as below: which means network connection is normal.

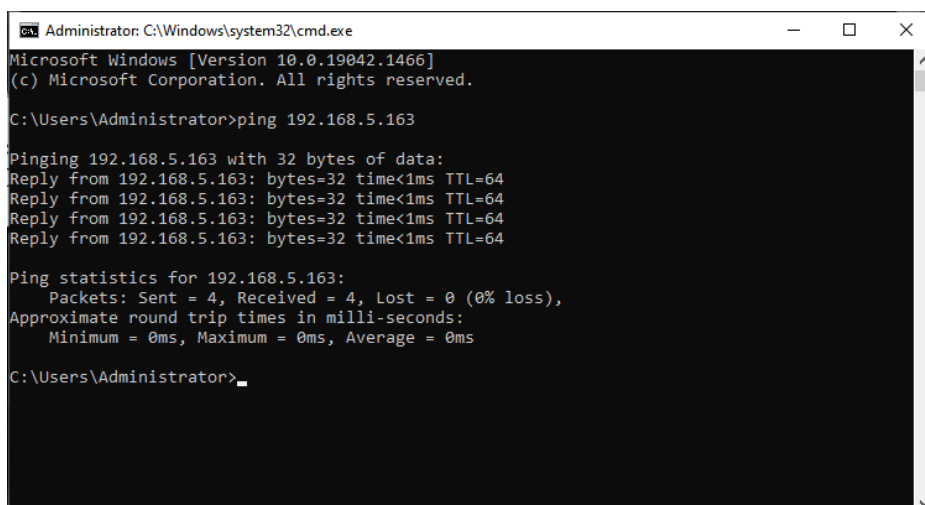

```
Administrator: C:\Windows\system32\cmd.exe
Microsoft Windows [Version 10.0.19042.1466]
(c) Microsoft Corporation. All rights reserved.

C:\Users\Administrator>ping 192.168.5.163

Pinging 192.168.5.163 with 32 bytes of data:
Reply from 192.168.5.163: bytes=32 time<1ms TTL=64
Reply from 192.168.5.163: bytes=32 time<1ms TTL=64
Reply from 192.168.5.163: bytes=32 time<1ms TTL=64
Reply from 192.168.5.163: bytes=32 time<1ms TTL=64

Ping statistics for 192.168.5.163:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

C:\Users\Administrator>
```

Figure4-2 Network Connection Screenshot

4.2 Camera Web Interface

4.2.1 Web Login

1) Web Login

After assigning an IP address to the camera, you can reach the Web Interface by typing in the camera's IP address into a web browser. You can log in this interface as administrator or user. If as administrator, type in "admin" into the username and password fields. If as user, type in "user1" or "user2" into the username and password fields. From the Web Interface, you can control the camera using the arrows on the left side. You can also adjust many of your camera's settings via this IP interface.

Note:

1. If login as "user", your rights are limited to preview, and logout (No configuration right)
2. Browsers that support Web function are Google, IE, 360 and other popular browsers.

2) Control Download and Installation

When accessing the network conference device for the first time using the Internet Explorer (IE) browser, you will see a message on the login interface that says "Plugin not installed, please download and install!" Click on this prompt message to download and install MRWebXinstall.exe. Follow the instructions provided to install the plugin.

After installing the plugin, enter the username and password, then click "Login" (the initial default username and password are "admin"). Once logged in, you will enter the Web client management interface.

4.2.2 Preview

After successful login into the management interface, it enters the video preview interface. In the preview screen, users can control PTZ, zoom, focus, video capture, sound, focus, full screen and set the preset position, run, delete and other operations.

1) Login as administrator


User name and default password: admin

You can perform operations such as PTZ control, zoom, focus, audio, zoom in, full screen, and preset position settings, operations, and deletion. You can also preview, configure, and log out.

2) Login as user

User name and default password: "user1" or "user2"

You can control PTZ, zoom, focus, video capture, sound, focus, full screen and set run, and delete the preset position.



- **Note:** Users logged in with the regular user mode do not have configuration permissions.

4.2.3 Configuration

Click Configuration to enter the device parameters setting page

There are the following options: audio configuration, video configuration, network configuration, system configuration, detailed description sees the following table:

Table 4-1 Explanation of Camera Configuration

Menu	Explanation
Audio Configuration	Including audio compressing format, sampling frequency, sampling precision, compressing code rate settings etc.
Video Configuration	Including video encoding, video parameters, character-overlapping, character size, video output setting etc.
Network Configuration	Including basic parameters, Ethernet, DNS, wireless network setting, GB28181 etc.
System Configuration	Including equipment property, system time, user management, version update, Reset, Reboot device settings etc.

4.2.4 Audio Configuration

Switch: Choose to enable the audio or not.

Compressing Format: Set audio compressing format and manually reboot the device after change (default AAC)

Sampling Frequency: Set sampling frequency and manually reboot the device after change (default 16000, 32000, 44100, 48000 optional)

Sampling Precision: Set sampling precision (default 16bits)

Compressing Code Rate: Set audio compressing code rate (default 64bits, 32, 48, 96, 128bits optional)

Channel Type: Set the channel type (mono by default, stereo optional)

Input volume: set the input volume (default 2, 1-10 optional)

Note Click "SAVE", it will display "Successfully saved. Restart the device to take effect".

4.2.5 Video Configuration

1) Video Encoding

Code Stream: Different video output mode setting, use different streams. (Main stream, secondary stream)

Compression Format: Set the video compression format, save to take it effect (primary/secondary stream default: H.264, H.265 optional)

Profile: Profile Mode Setting (Default HP, BP, MP Optional)

Video Size: Set video image resolution, save to take it effect (main stream default 1920*1080, 1280*720, 640*480, 640*360 optional; default secondary stream 320*180, 320*240, 640*360, 640*480, 1280*720, 1920*1080 optional)

Stream Rate Control: Set rate control mode, save to take it effect (Primary/secondary stream default variable bit rate, fixed rate is for option).

Image Quality: Set the image quality, image quality can be changed only when rate control is variable bit rate.

Rate (Kb/s): Set the video bit rate (main stream default 4096Kb/s, 64-40960Kb/s optional; secondary stream default 512Kb/s, 64-40960Kb/s optional)

Frame rate (F/S): Set the video frame rate (primary/secondary stream default 25F/S, primary stream 5-60F/S optional; secondary stream 5-30 F/S optional)

Key frame interval: Set the key frame interval (primary/secondary stream default 75, primary/ stream 1-150 optional; secondary stream 1-150 optional)

Minimum QP of key frame interval: Set minimum QP of key frame interval(Default 20, 10-51 optional)

Stream Name: When streaming via rtsp or rtmp, user can modify stream name. Main Stream(live/av0), sub stream(live/av1)

Click the "Save" button to display the "Parameter saved successfully" message, then settings take effect.

2) Stream Release

Switch: To turn on/off the main/secondary stream.

Protocol: primary/secondary stream applies RTMP protocol, RTSP, SRT.

Host Port: server port number (default 1935, 0-65535 optional)

Host Address: server IP addresses (default 192.168.5.11)

Stream Name: choose a different stream name (live/av0, live/av1 optional).

User: Set the username.

Password: Set the password.

Click on the "Save" button to display the "Save successful" message, then settings take effect.

3) RTP Broadcasting

Main/Sub Stream: On/off;

Protocol: (default RTP, TS, UDP, TCP optional)

Address: Default 224.1.2.3.

Port: The main stream defaults to 4000, the secondary stream defaults to 4002, and the main/secondary stream is optional from 0 to 65535 optional.

Visit: Address comes up after setting. Eg; rtp://224.1.2.3:4000; udp://@224.1.2.3:4000; tcp://@224.1.2.3:4002;

4) Video Parameters

A) Focus: Focus mode, focus tactic, focus sensitivity can be set.

Focus Mode: set the focus mode (Default automatic, manual optional, one-push)

Focus Tactic: Set focus strategy (default options: up, middle, down, all selectable)

Focus Sensitivity: Set the focus sensitivity (default is low, high, medium optional)

B) Exposure: Exposure mode, exposure compensation, backlight compensation, anti-flicker, gain limit, dynamic range, shutter, aperture, brightness, gain can be set.

Exposure Mode: Set the exposure mode (Default automatic, manual, shutter priority, aperture priority, brightness priority optional)

Exposure Compensation: Exposure compensation setting is active when it is auto status (default is off).

Exposure Compensation Value: Set the exposure compensation value, valid when Exposure Compensation is on (default 0, -7 to 7 optional).

BLC: Set back light compensation, valid when it is auto status (default is off).

Anti-flicker: Set the anti-flicker mode, which is only effective when the exposure mode is set to auto, aperture-priority, or brightness-priority (default 50Hz, options: off, 60Hz).

Gain Limit: Set the gain limits, valid in auto focus, iris priority, and brightness priority. (default 4, 0~15 options)

Gain: Set gain, only valid in manual exposure mode and shutter priority (default 0, 0~15 optional)

Dynamic Range: Set the dynamic range (default 4, 1-8 optional).

Shutter Speed: Set shutter speed value, valid in manual focus and shutter priority. (default 1/100, 1/25, 1/30, 1/50, 1/60, 1/90, 1/100, 1/120, 1/200, 1/250, 1/350, 1/500, 1/1000, 1/2000, 1/3000, 1/4000, 1/6000, 1/10000, 1/20000 optional)

Aperture Value: Set aperture value, which is only effective in manual and aperture-priority exposure modes. (default F1.8, Close, F11, F9.6, F8.0, F6.8, F5.6, F4.8, F4.0, F3.4, F2.8, F2.4, F2.0, F1.8 optional)

Brightness: Set the brightness value, valid in brightness priority mode (default 7,0-20 optional).

C) Color: White balance, saturation, hue, white balance sensitivity, red fine tuning, blue fine tuning, red gain, blue gain, Temperature can be set.

White Balance Mode: Set the white balance mode (Default automatic, manual, one-push white balance, specified color temperature is optional) Note: Right click the “Correction” button when selected the One-push white balance mode.

Red Fine Tuning: Set red fine tuning, valid in auto white balance mode. (Default 0, -10~10 optional)

Blue Fine Tuning: Set Blue fine tuning, valid in auto white balance mode. (Default 0, -10~10 可选)

Saturation: Set the saturation (default 36, 0-124 optional)

Chroma: Set the chrome (default 4, 0-8 optional).

Auto White Balance Sensitivity: white balance Sensitivity settings (default is high, medium, low optional)

Red Gain: Set the red gain, effective when it is manual (default 45, 0-255 optional).

Blue Gain: Sets the Blue gain, effective when it is manual (default 45, 0-255 optional).

Color temperature: 2400K-7100K (selectable at specified color temperature).

D) Image: You can set brightness, contrast, sharpness, gamma curve, dynamic contrast, black and white mode, horizontal flip, vertical flip, electronic zoom, Lens distortion correction

Brightness: Set the brightness (default 50, 0-10 optional).

Contrast: Set the contrast (default 50, 0-10 optional).

Sharpness: Set the sharpness value (default 5, 0-15 optional).

Gamma: Gamma value setting (default 0.45, 0.50, 0.55, 0.63 optional).

BW Mode: Set black and white mode (default color, black/white optional).

Horizontal Flip: Enable horizontal flipping (Displayed when automatic flipping is off, default options are off and on)

Vertical Flip: Enable vertical flipping (Displayed when automatic flipping is off, default options are off and on).

Digital Zoom: Enable digital zoom (Default options are off and on).

Auto Flip: Enable image flipping (Default option is on, off is optional).

Ultra Low Light: Enable ultra-low light mode (Default option is on, off is optional).

E) Noise Reduction: 2D noise reduction, 3D noise reduction and dynamic dead pixel correction available.

2D Noise Reduction: Set 2D noise reduction level (default auto, 1~7 and off optional)

3D Noise Reduction: Set 3D noise reduction level (default auto, 1~7 and off optional)

F) Style: Select image (Default, standard, brightness, clarity, and soft can be set)



Caution

- Refresh the page after changing above parameters in a, b, c, d, e, f to take effect.
-

5) Character Overlapping

Display Time & Date: Yes/No

Display Title: Yes/No

Time, Font and Color: Default white, black, yellow, red and blue optional)

Title Font Color: Default white, black, yellow, red, and blue optional)

Move Character: Set the location where the time and title to display. Click “up, down, left, right” button to move the characters’ location.

Title: Set title on device property (default CAMERA1)

Time: Set time on system time (default 1970/01/01 05:36:00)

Click “Save” button, “parameters are successfully saves” window pop-up, which means the setting take effect.

6) Character Size

Automatically Adjust According to the Resolution: Yes/No

Main Stream Character Size: Set the character size of the display, the device will automatically restart after changed (default 48, 28-200 optional)

Secondary Stream Character Size: Set the character size of the display, the device will automatically restart after changed (default 48, 28-200 optional)

Click "Save" button, "parameters are successfully saves" window pop-up, which means the setting take effect.

7) Video Output

Output Format: Set the video output format

4KP30, 4KP25, 1080P60, 1080P50, 1080P30, 1080P25, 720P60, 720P50, 1080P59.94, 1080P29.97, 720P59.94, optional

Click "Save" button, "parameters are successfully saves" window pop-up, which means the setting take effect.

4.2.6 Network Configuration

1) Network Port

Data Port: set the data port, the device will restart automatically after changed (default 3000, 0-65535 optional).

Web Port: Set Web port, the device will restart automatically after changed (default is 80, 0-65535 is optional).

Onvif Port: Set Onvif port, the device will restart automatically after changed (default 2000, 0-65535 optional).

Soap Port: Set Soap port (default 1936, 0-65535 optional).

RTMP Port: Set RTMP port (default 1935, 0-65535 optional).

RTSP Port: Set RTSP port, the device will restart automatically after changed (default 554, 0-65535 optional).

Visca Port: Set Visca port, the device will restart automatically after changed (default 3001, 0-65535 optional).

Https Port: Set http port, the device will restart automatically after changed (default 443, 0-65535 optional).

WebSocket Port: Set WebSocket port, the device will restart automatically after changed (default 8088, 0-65535 optional).

Click on the "Save" button, it will be valid when display "Save successful".


RTMP access: RTMP:// equipment IP address: 1935/live/av0 (av0 main stream; av1 second stream)

RTMP Access: Rtmp://equipment IP address: 1935/live/av0 (av0 main stream; av1 second stream)

2) Ethernet Parameter

DHCP: Enable or disable obtain IP automatically can be set. After saved, reboot the device to takes effect (default: OFF)

IP Address: Set the IP address, after saved, reboot the device to take effect (default 192.168.5.163).



- Note: This IP address is the same as the one used to login Web page.
-

Subnet Mask: Set the subnet mask (default 255.255.255.0).

Default Gateway: Set the default gateway (default 0.0.0.0).

Physical Address: Set the physical address (the parameter is read-only)

Click the "Save" button, it will be valid when display "Save successful". (Note: To prevent IP conflicts when modified).

3) DNS parameters

Preferred DNS Server: Set the preferred DNS server. (Default 0.0.0.0).

Alternate DNS Server: Set alternate DNS server. (Default 0.0.0.0).

Click the "Save" button, it will be valid when display "Save successful".

4) GB28181

Switch: Set whether to activate GB28181.

Time Synchronization: Enable/Disable time synchronization

Stream Type: Set stream type (default main stream, secondary stream optional)

Signing Time (in seconds): 3600, range 5-65535

Heartbeat Time (seconds): 60, range 1-65535

Register ID: 34020000001320000001

Register User Name: IPC

Register Password: 12345678

Equipment Ownership: Users can add their own

Administrative Regions: Users can add their own

Alarm Zone: Users can add their own

Equipment Installation Address: Users can add their own

Local SIP Port: 5060 Range 0-65535

GB28181 Server Address: IP address of the computer

Server SIP Port: 5060 Range 0-65535

Server ID: 34020000002000000001

Click on the "Save" button, it will be valid when display "Save successful".

5) SRT

SRT Port: Set the SRT port (default 9000, 0-65535 optional)

SRT Password: Set SRT password

SRT Password Length: Set the SRT password length (default 0, 16, 24, 32 optional)

Click the "Save" button, and the prompt message "Parameters saved successfully! It will take effect after restarting!"

6) RTSP

Enable RTSP: Enable/Disable RTSP

RTSP Authentication: Set RTSP authentication, default off, on optional

Click the "Save" button, and it will display "Parameters saved successfully! The new parameter will take effect after restarting."

4.2.7 System Configuration

1) Device Properties

Device Name: Set the device name (Default Camera-1, user can add their own).

Device ID: Set the device ID (default 1, read-only).

System Language: Set the system language (default Simplified Chinese, English optional).Need to re-login after modify and save the setting.

Click on the "Save" button, it will be valid when display "Save successful".

2) USB Storage: Recording formats (MP4, TS), recording duration, and device information.

Note: Recording duration is divided by 30 minutes. For example, if set to 50 minutes, it will be saved as two files (one of 30 minutes and one of 20 minutes).

3) USB recording: Historical recording information can be queried. Click the record button at the bottom of the preview interface to start or stop recording. Files will be displayed on the USB recording page.

4) System Time

Date Format: Set the date format (YYYY-MM-DD default year - month - day, MM-DD-YYYY namely Month - Day - Year, DD-MM-YYYY date - month - year Optional).

Date Separator: set the date separator (default '/', '.', '-' Optional).

Time Zone: Set the time zone (default UTC+08:00, other time zones optional).

Time Type: Set the time types (default 24 hours, optional 12 hours).

Enable NTP: Enable/disable NTP

Update Interval: Set the NTP server automatic updated time interval. Valid after setting NTP server synchronization (default one day, 2-10 days Optional).

NTP Server Address or Domain Name: Set NTP server address or domain name (default time.nits.gov). Valid after setting NTP server synchronization.

NTP Server Port: Sets the NTP server port (default 123).Valid after setting NTP server synchronization.

Click on the "Save" button, it will be valid when display "Save successful".

Time Setting: Set the time synchronization method (optional with computer time synchronization, NTP server synchronization, manual setting).

Computer Time: Displays the computer time (only effective when synchronized with computer time setting method), simply click the "Sync" button to synchronize.

Manual Time Setting: Click the calendar icon on the right to manually set the time (only effective when manual setting method is selected).

5) User Management

Select Users: Set the user type (the default administrator, User 1, User 2 optional)

User Name: Set the user name (Select User Administrator default admin; select a common user1 default user1; to select a common user 2 default user2; user can modify their own)

Password: Set a password (Select User Administrator default admin; select a common user1 default user1; to select a common user 2 default user2; user can modify their own).

Password Confirmation: Confirm the input passwords are the same

Click the "Save" button to display the message "Parameter saved successfully", and the setting will take effect

Username and password are case-sensitive.



- Note: If logging into the webpage with regular user credentials, only preview and log-out operations are permitted, and configuration permission is not granted.
-

6) Version Update

The version information displayed on the page is read-only version and cannot be modified by the user. It is the same as the version information in the menu. The version information of different device models is different.

Update File: Click "Browse..." in the pop-up window and select the upgrade file; click the "Upgrade" button, the upgrade dialog box will pop up. After successfully update, device will

automatically reboot. (Note: Make sure that the device power and network can work during update, if not, the upgrade will fail.)

Caution

- After the version upgrade is completed, you need to restore the factory default values
 - a, restore the factory default through web configuration;
 - b, restore the factory default value through the menu;
 - c, remote control shortcut key *#6 restore factory default;
 Choose one of the above three methods, in which the IP account and password of “method a” are also restored to the default.

7) Restore Factory Setting

Click "Restore Factory Defaults" button and choose “yes” or “no” on pop-up window, then the device will restart automatically and restore factory setting.

8) Reboot

Click "Reboot" button and choose “yes” or “no” on the pop-up window, then the device will restart automatically.

4.2.8 Logout

Click "Logout"; and select "Yes" or "No" on pop-up window. If choose “Yes”, you will exit the current page and return to the user login interface again.

4.2.9 Monocular Tracking

1) Real-time Tracking



- ① Enable/Disable Human Detection Box – Default is disabled. When enabled, the tracked target will be surrounded by a yellow box, while other objects will be in green boxes.

- ② Enable/Disable Object Selection – Default is disabled. When enabled, left-clicking on a person with the mouse will make that person the tracking target.
- ③ Select Tracking Mode: Disable Tracking, Real-time Tracking, Stage Tracking, Area Tracking, and Intelligent Framing – Default is disabled.
- ④ Set Sensitivity: High, Medium, or Low – Default is Medium.
- ⑤ Set Person Size: Close-up, Half-body, Full-body, or Custom (0–5) – Default is Half-body.
- ⑥ Set Position of the Person in the Frame: Left, Center, or Right – Default is Center.
- ⑦ Set Action When Target is Lost: Return to Origin, Preset Position 0, or Last Known Position – Default is Return to Origin.
- ⑧ Target Loss Duration: Can be set from 0 to 60 seconds. Default is 3 seconds.

	Sensitivity	Person Size	Person Position	Target Loss Action	Target Loss Duration
Real-time Tracking	⊙	⊙	⊙	⊙	⊙
Stage Tracking	⊙	×	⊙	⊙	⊙
Area Tracking	⊙	×	×	⊙	⊙
Intelligent Framing	⊙	×	×	⊙	⊙

Notes:

1. ⊙: Configurable in this tracking mode. 2. ×: Not configurable in this tracking mode.

2) Stage Tracking



①: Click to set the left boundary of the tracking area, then click [Set] to complete.

②: Click to set the right boundary of the tracking area, then click [Set] to complete.

③: Click to adjust the window to the left boundary position.

④: Click to adjust the window to the right boundary position.

Note: Area setting is only possible when tracking is disabled.

3) Regional Tracking



①: Taking Area 1 as an example: Adjust the pan-tilt to set the tracking area, then click [Set] to finalize the setup, and the image will be saved and displayed in Window 1.

②: Click [Run] to adjust the camera to the preset area.

③: Click the window view to adjust the camera to the preset area.

④: Select the areas to track, with a minimum of 2 areas required.

Notes:

1. Area setting is only possible when tracking is disabled.
2. Each preset view must be continuous from left to right and overlap during setup.

5. Serial Port Communication Control

In normal working state, you can control the camera through RS232/RS485 (VISCA IN) cable. The parameter of RS232 is as below:

Baud rate: 2400/4800/9600/115200/second

Start Bit: 1 bit; Data Bit: 8 bit; Stop Bit: 1 bit; Verification Bit: None.

After power on, the camera will have a brief tour and then back to the center position.

The zoom lens is pulled to the farthest position, and then pulled back, after that self-test is completed.

5.1 VISCA Protocol List

5.1.1 VISCA Protocol List

Ack/Completion Message		
	Command Package	Remark

ACK	z0 41 FF	Returned when the command is accepted.
Completion	z0 51 FF	Returned when the command has been executed.

z = Device address + 8

Error Messages		
	Command Package	Remark
Syntax Error	z0 60 02 FF	Returned when the command format is different or when a command with illegal command parameters is accepted.
Command Buffer Full	z0 60 03 FF	Indicates that two sockets are already being used (executing two commands) and the command could not be accepted when received.
Command Canceled	z0 6y 04 FF(y: Socket No.)	Returned when a command which is being executed in a socket specified by the cancel command is canceled. The completion message for the command is not returned.
No Socket	z0 6y 05 FF(y: Socket No.)	Returned when no command is executed in a socket specified by the cancel command, or when an invalid socket number is specified.
Command Not Executable	z0 6y 41 FF(y: Execution command Socket No. Inquiry command: 0)	Returned when a command can not be executed due to current conditions. For example, when commands controlling the focus manually are received during auto focus.

5.1.2 Device Control Command

Command	Function	Command Package	Remark
AddressSet	Broadcast	88 30 0p FF	p:Address setting
IF_Clear	Broadcast	88 01 00 01 FF	I/F Clear
CAM_Power	On	8x 01 04 00 02 FF	Power ON/OFF
	Off	8x 01 04 00 03 FF	
CAM_Zoom	Stop	8x 01 04 07 00 FF	
	Tele(Standard)	8x 01 04 07 02 FF	
	Wide(Standard)	8x 01 04 07 03 FF	
	Tele(Variable)	8x 01 04 07 2p FF	p = 0(low) - 7(high)

	Wide(Variable)	8x 01 04 07 3p FF	
	Direct	8x 01 04 47 0p 0q 0r 0s FF	pqrs: Zoom Position
CAM_Focus	Stop	8x 01 04 08 00 FF	
	Far(Standard)	8x 01 04 08 02 FF	
	Near(Standard)	8x 01 04 08 03 FF	
	Far(Variable)	8x 01 04 08 2p FF	p = 0(low) - 7(high)
	Near (Variable)	8x 01 04 08 3p FF	
	Direct	8x 01 04 48 0p 0q 0r 0s FF	pqrs: Focus Position
	Auto Focus	8x 01 04 38 02 FF	
	Manual Focus	8x 01 04 38 03 FF	
	One Push mode	8x 01 04 38 04 FF	
	One Push Trigger	8x 01 04 18 01 FF	One Push Trigger
CAM_Zoom Focus	Direct	8x 01 04 47 0p 0q 0r 0s 0t 0u 0v 0w FF	pqrs: Zoom Position tuvw: Focus Position
CAM_AF Sensitivity	High	8x 01 04 58 01 FF	Focus sensitivity Setting
	Normal	8x 01 04 58 02 FF	
	Low	8x 01 04 58 03 FF	
CAM_AF Zone	Top	8x 01 04 AA 00 FF	Focus Region Setting
	Center	8x 01 04 AA 01 FF	
	Bottom	8x 01 04 AA 02 FF	
	ALL	8x 01 04 AA 03 FF	
CAM_WB	Auto	8x 01 04 35 00 FF	
	2400K	8x 01 04 35 0C FF	
	2500K	8x 01 04 35 0D FF	
	2600K	8x 01 04 35 0E FF	
	2700K	8x 01 04 35 0F FF	
	2800K	8x 01 04 35 10 FF	
	2900K	8x 01 04 35 11 FF	

	3000K	8x 01 04 35 01 FF	
	3100K	8x 01 04 35 12 FF	
	3200K	8x 01 04 35 13 FF	
	3300K	8x 01 04 35 14 FF	
	3400K	8x 01 04 35 15 FF	
	3500K	8x 01 04 35 07 FF	
	3600K	8x 01 04 35 16 FF	
	3700K	8x 01 04 35 17 FF	
	3800k	8x 01 04 35 18 FF	
	3900K	8x 01 04 35 19 FF	
	4000K	8x 01 04 35 02 FF	
	4100K	8x 01 04 35 1A FF	
	4200K	8x 01 04 35 1B FF	
	4300K	8x 01 04 35 1C FF	
	4400K	8x 01 04 35 1D FF	
	4500K	8x 01 04 35 08 FF	
	4600K	8x 01 04 35 1E FF	
	4700K	8x 01 04 35 1F FF	
	4800K	8x 01 04 35 21 FF	
	4900K	8x 01 04 35 22 FF	
	5000K	8x 01 04 35 04 FF	
	5100K	8x 01 04 35 23 FF	
	5200K	8x 01 04 35 24 FF	
	5300K	8x 01 04 35 25 FF	
	5400K	8x 01 04 35 26 FF	
	5500K	8x 01 04 35 09 FF	
	5600K	8x 01 04 35 27 FF	
	5700K	8x 01 04 35 28 FF	
	5800K	8x 01 04 35 29 FF	

	5900K	8x 01 04 35 2A FF	
	6000K	8x 01 04 35 0A FF	
	6100K	8x 01 04 35 2B FF	
	6200K	8x 01 04 35 2C FF	
	6300K	8x 01 04 35 2D FF	
	6400K	8x 01 04 35 2E FF	
	6500K	8x 01 04 35 06 FF	
	6600K	8x 01 04 35 2F FF	
	6700K	8x 01 04 35 30 FF	
	6800K	8x 01 04 35 31 FF	
	6900K	8x 01 04 35 32 FF	
	7000K	8x 01 04 35 0B FF	
	7100K	8x 01 04 35 33 FF	
	One Push mode	8x 01 04 35 03 FF	
	One Push Trigger	8x 01 04 10 05 FF	One Push WB Trigger (Enabled during One Push WB mode)
	Manual	8x 01 04 35 05 FF	
CAM_AWB Sensitivity	Low	8x 01 04 A9 00 FF	WB Sensitivity Setting
	Normal	8x 01 04 A9 01 FF	
	High	8x 01 04 A9 02 FF	
CAM_RGain	Reset	8x 01 04 03 00 FF	Manual Control of R Gain
	Up	8x 01 04 03 02 FF	
	Down	8x 01 04 03 03 FF	
	Direct	8x 01 04 43 00 00 0p 0q FF	pq: R Gain
CAM_Bgain	Reset	8x 01 04 04 00 FF	Manual Control of B Gain
	Up	8x 01 04 04 02 FF	
	Down	8x 01 04 04 03 FF	
	Direct	8x 01 04 44 00 00 0p 0q FF	pq: B Gain
CAM_AE	Full Auto	8x 01 04 39 00 FF	Automatic Exposure mode

	Manual	8x 01 04 39 03 FF	Manual Control mode
	Shutter priority	8x 01 04 39 0A FF	Shutter Priority Automatic Exposure mode
	Iris priority	8x 01 04 39 0B FF	Iris Priority Automatic Exposure mode
	Bright	8x 01 04 39 0D FF	Bright mode
CAM_Shutter	Reset	8x 01 04 0A 00 FF	Shutter Setting
	Up	8x 01 04 0A 02 FF	
	Down	8x 01 04 0A 03 FF	
	Direct	8x 01 04 4A 00 00 0p 0q FF	pq: Shutter Position
CAM_Iris	Reset	8x 01 04 0B 00 FF	Iris Setting
	Up	8x 01 04 0B 02 FF	
	Down	8x 01 04 0B 03 FF	
	Direct	8x 01 04 4B 00 00 0p 0q FF	pq: Iris Position
CAM_Gain Limit	Reset	8x 01 04 0C 00 FF	Gain Limit Setting
	Up	8x 01 04 0C 02 FF	
	Down	8x 01 04 0C 03 FF	
	Gain Limit	8x 01 04 2C 0p FF	p: Gain Position
CAM_Bright	Reset	8x 01 04 0D 00 FF	Bright Setting
	Up	8x 01 04 0D 02 FF	
	Down	8x 01 04 0D 03 FF	
	Direct	8x 01 04 4D 00 00 0p 0q FF	pq: Bright Position
CAM_ExpComp	On	8x 01 04 3E 02 FF	Exposure Compensation ON/OFF
	Off	8x 01 04 3E 03 FF	
	Reset	8x 01 04 0E 00 FF	Exposure Compensation Amount Setting
	Up	8x 01 04 0E 02 FF	
	Down	8x 01 04 0E 03 FF	
	Direct	8x 01 04 4E 00 00 0p 0q FF	pq: ExpComp Position
CAM_Back Light	On	8x 01 04 33 02 FF	Back Light
	Off	8x 01 04 33 03 FF	Compensation

CAM_WDRStrength	Reset	8x 01 04 21 00 FF	WDR Level Setting
	Up	8x 01 04 21 02 FF	
	Down	8x 01 04 21 03 FF	
	Direct	8x 01 04 51 00 00 00 0p FF	p: WDR Level Position
CAM_NR	2D	8x 01 04 53 0p FF	P=0-8 0:OFF
	3D	8x 01 04 54 0p FF	P=0-8 0:OFF
CAM_Gamma		8x 01 04 5B 0p FF	p = 0 – 4 0:Default 1:0.45 2:0.50 3:0.55 4:0.63
CAM_Low-Light Mode	ON	8x 01 04 2D 01 FF	Low-Light Mode Setting
	OFF	8x 01 04 2D 00 FF	
CAM_Gain		8x 01 04 4C 00 00 0p 0q FF	pq:0-15
CAM_PresetSpeed		8x 01 01 0p FF	p:1-10
CAM_Flicker	OFF	8x 01 04 23 00 FF	OFF
	50HZ	8x 01 04 23 01 FF	50HZ
	60HZ	8x 01 04 23 02 FF	60HZ
CAM_Aperture	Reset	8x 01 04 02 00 FF	Aperture Control
	Up	8x 01 04 02 02 FF	
	Down	8x 01 04 02 03 FF	
	Direct	8x 01 04 42 00 00 0p 0q FF	pq: Aperture Gain
CAM_Picture effect	B&W-Mode	8x 01 04 63 04 FF	Picture effect Setting
	OFF	8x 01 04 63 00 FF	
CAM_Memory	Reset	8x 01 04 3F 00 pq FF	pq: Memory Number(=0 to 254) Corresponds to 0 to 9 on the Remote Commander
	Set	8x 01 04 3F 01 pq FF	
	Recall	8x 01 04 3F 02 pq FF	
CAM_LR_Reverse	On	8x 01 04 61 02 FF	Image Flip Horizontal ON/OFF
	Off	8x 01 04 61 03 FF	
CAM_PictureFlip	On	8x 01 04 66 02 FF	Image Flip Vertical ON/OFF
	Off	8x 01 04 66 03 FF	

CAM_ColorSaturation	Direct	8x 01 04 49 00 00 00 0p FF	P:CAM_ColorSaturation
CAM_IDWrite		8x 01 04 22 0p 0q 0r 0s FF	pqrs: Camera ID (=0000 to FFFF)
SYS_Menu	ON	8x 01 04 06 06 02 FF	Turn on the menu screen
	OFF	8x 01 04 06 06 03 FF	Turn off the menu screen
IR_Receive	ON	8x 01 06 08 02 FF	IR(remote commander)receive On/Off
	OFF	8x 01 06 08 03 FF	
CAM_Setting Reset	Reset	8x 01 04 A0 10 FF	Reset Factory Setting
CAM_Brightness	Direct	8x 01 04 A1 00 00 0p 0q FF	pq: Brightness Position
CAM_Contrast	Direct	8x 01 04 A2 00 00 0p 0q FF	pq: Contrast Position
CAM_Flip	OFF	8x 01 04 A4 00 FF	Single Command For Video Flip
	Flip-H	8x 01 04 A4 01 FF	
	Flip-V	8x 01 04 A4 02 FF	
	Flip-HV	8x 01 04 A4 03 FF	
CAM_VideoSystem	Set Camera video system	8x 01 06 35 00 0p FF	P: Video format 0:1080P60 1:1080P50 4:720P60 5:720P50 6:1080P30 7:1080P25 A:1080P59.94 C:720P59.94 D:1080P29.97 0x19:4KP30 0X1A:4KP25
Pan_tiltDrive	Up	8x 01 06 01 VV WW 03 01 FF	VV: Pan speed 0x01 (low speed) to 0x18 (high speed) WW: Tilt speed 0x01 (low
	Down	8x 01 06 01 VV WW 03 02 FF	

	Left	8x 01 06 01 VV WW 01 03 FF	speed) to 0x14 (high speed) YYYY: Pan Position ZZZZ: Tilt Position
	Right	8x 01 06 01 VV WW 02 03 FF	
	Upleft	8x 01 06 01 VV WW 01 01 FF	
	Upright	8x 01 06 01 VV WW 02 01 FF	
	DownLeft	8x 01 06 01 VV WW 01 02 FF	
	DownRight	8x 01 06 01 VV WW 02 02 FF	
	Stop	8x 01 06 01 VV WW 03 03 FF	
	AbsolutePosition	8x 01 06 02 VV WW 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	
	RelativePosition	8x 01 06 03 VV WW 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	
	Home	8x 01 06 04 FF	
	Reset	8x 01 06 05 FF	
Pan-tiltLimitSet	Set	8x 01 06 07 00 0W 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	W:1 UpRight 0:DownLeft YYYY: Pan Limit Position(TBD) ZZZZ: Tilt Limit Position(TBD)
	Clear	8x 01 06 07 01 0W 07 0F 0F 0F 07 0F 0F 0F FF	

5.1.3 Inquiry Command

Command	Command Package	Return Package	Remark
CAM_PowerInq	8x 09 04 00 FF	y0 50 02 FF	On
		y0 50 03 FF	Off(Standby)
CAM_ZoomPosInq	8x 09 04 47 FF	y0 50 0p 0q 0r 0s FF	pqrs: Zoom Position
CAM_FocusAFModeln	8x 09 04 38 FF	y0 50 02 FF	Auto Focus

q		y0 50 03 FF	Manual Focus
		y0 50 04 FF	One Push mode
CAM_FocusPosInq	8x 09 04 48 FF	y0 50 0p 0q 0r 0s FF	pqrs: Focus Position
CAM_AFSensitivityInq	8x 09 04 58 FF	y0 50 01 FF	High
		y0 50 02 FF	Normal
		y0 50 03 FF	Low
CAM_AFZoneInq	8x 09 04 AA FF	y0 50 00 FF	Top
		y0 50 01 FF	Center
		y0 50 02 FF	Bottom
		y0 50 03 FF	All
CAM_WBModelInq	8x 09 04 35 FF	y0 50 pq FF	Pq=WBMode
CAM_AWBSensitivityInq	8x 09 04 A9 FF	y0 50 00 FF	Low
		y0 50 01 FF	Normal
		y0 50 02 FF	High
CAM_RGainInq	8x 09 04 43 FF	y0 50 00 00 0p 0q FF	pq: R Gain
CAM_BGainInq	8x 09 04 44 FF	y0 50 00 00 0p 0q FF	pq: B Gain
CAM_AEModelInq	8x 09 04 39 FF	y0 50 00 FF	Full Auto
		y0 50 03 FF	Manual
		y0 50 0A FF	Shutter priority
		y0 50 0B FF	Iris priority
		y0 50 0D FF	Bright
CAM_ShutterPosInq	8x 09 04 4A FF	y0 50 00 00 0p 0q FF	pq: Shutter Position
CAM_IrisPosInq	8x 09 04 4B FF	y0 50 00 00 0p 0q FF	pq: Iris Position
CAM_Gain LimitInq	8x 09 04 2C FF	y0 50 0p FF	p: Gain Positon
CAM_BrightPosInq	8x 09 04 4D FF	y0 50 00 00 0p 0q FF	pq: Bright Position
CAM_ExpCompModelInq	8x 09 04 3E FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_ExpCompPosInq	8x 09 04 4E FF	y0 50 00 00 0p 0q FF	pq: ExpComp Position
CAM_BacklightModel	8x 09 04 33 FF	y0 50 02 FF	On

nq		y0 50 03 FF	Off
CAM_WDRStrengthInq	8x 09 04 51 FF	y0 50 00 00 00 0p FF	p: WDR Strength
CAM_NRLevel(2D) Inq	8x 09 04 53 FF	y0 50 0p FF	P: 2DNRLevel
CAM_NRLevel(3D) Inq	8x 09 04 54 FF	y0 50 0p FF	P:3D NRLevel
CAM_FlickerModelInq	8x 09 04 55 FF	y0 50 0p FF	p: Flicker Settings(0: OFF, 1: 50Hz, 2:60Hz)
CAM_ApertureInq	8x 09 04 42 FF	y0 50 00 00 0p 0q FF	pq: Aperture Gain
CAM_PictureEffectModelInq	8x 09 04 63 FF	y0 50 00 FF	Off
		y0 50 04 FF	B&W
CAM_MemoryInq	8x 09 04 3F FF	y0 50 0p FF	p: Memory number last operated.
SYS_MenuModelInq	8x 09 06 06 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_LR_ReverseInq	8x 09 04 61 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_PictureFlipInq	8x 09 04 66 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_ColorSaturationInq	8x 09 04 49 FF	y0 50 00 00 00 0p FF	p: Color Gain setting 0h (60%) to Eh (130%)
CAM_IDInq	8x 09 04 22 FF	y0 50 0p FF	p: Camera ID
IR_ReceiveInq	8x 09 06 08 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_BrightnessInq	8x 09 04 A1 FF	y0 50 00 00 0p 0q FF	pq: Brightness Position
CAM_ContrastInq	8x 09 04 A2 FF	y0 50 00 00 0p 0q FF	pq: Contrast Position
CAM_FlipInq	8x 09 04 A4 FF	y0 50 00 FF	Off
		y0 50 01 FF	Flip-H
		y0 50 02 FF	Flip-V
		y0 50 03 FF	Flip-HV
CAM_GammaInq	8x 09 04 5B FF	y0 50 0p FF	p: Gamma setting

CAM_VersionInq	8x 09 00 02 FF	y0 50 ab cd mn pq rs tu vw FF	ab cd : vender ID (0220) mn pq : model ID rs tu:ARM Version vw:reserve
VideoSystemInq	8x 09 06 23 FF	y0 50 0p FF	P:Video format 0:1080P60 1:1080P50 4:720P60 5:720P50 6:1080P30 7:1080P25 A:1080P59.94 C:720P59.94 D:1080P29.97 0x19:4KP30 0X1A:4KP25
Pan-tiltMaxSpeedInq	8x 09 06 11 FF	y0 50 ww zz FF	ww: Pan Max Speed zz: Tilt Max Speed
Pan-tiltPosInq	8x 09 06 12 FF	y0 50 0w 0w 0w 0w 0z 0z 0z 0z FF	www: Pan Position zzzz: Tilt Position

Note: [x] in the above table represents the address of the device to be operated, [y]=[x + 8].

5.2 Pelco-D Protocol Command List

Function	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7
Up	0xFF	Address	0x00	0x08	Pan Speed	Tilt Speed	SUM
Down	0xFF	Address	0x00	0x10	Pan Speed	Tilt Speed	SUM
Left	0xFF	Address	0x00	0x04	Pan Speed	Tilt Speed	SUM
Right	0xFF	Address	0x00	0x02	Pan Speed	Tilt Speed	SUM
Upleft	0xFF	Address	0x00	0x0C	Pan Speed	Tilt Speed	SUM
Upright	0xFF	Address	0x00	0x0A	Pan Speed	Tilt Speed	SUM
DownLeft	0xFF	Address	0x00	0x14	Pan Speed	Tilt Speed	SUM
DownRight	0xFF	Address	0x00	0x12	Pan Speed	Tilt Speed	SUM
Zoom In	0xFF	Address	0x00	0x20	0x00	0x00	SUM

Zoom Out	0xFF	Address	0x00	0x40	0x00	0x00	SUM
Focus Far	0xFF	Address	0x00	0x80	0x00	0x00	SUM
Focus Near	0xFF	Address	0x01	0x00	0x00	0x00	SUM
Stop	0xFF	Address	0x00	0x00	0x00	0x00	SUM
Set Preset	0xFF	Address	0x00	0x03	0x00	Preset ID	SUM
Clear Preset	0xFF	Address	0x00	0x05	0x00	Preset ID	SUM
Call Preset	0xFF	Address	0x00	0x07	0x00	Preset ID	SUM
Query Pan Position	0xFF	Address	0x00	0x51	0x00	0x00	SUM
Query Pan Position Response	0xFF	Address	0x00	0x59	Value High Byte	Value Low Byte	SUM
Query Tilt Position	0xFF	Address	0x00	0x53	0x00	0x00	SUM
Query Tilt Position Response	0xFF	Address	0x00	0x5B	Value High Byte	Value Low Byte	SUM
Query Zoom Position	0xFF	Address	0x00	0x55	0x00	0x00	SUM
Query Zoom Position Response	0xFF	Address	0x00	0x5D	Value High Byte	Value Low Byte	SUM

5.3 Pelco-P Protocol Command List

Function	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8
Up	0xA0	Address	0x00	0x08	Pan Speed	Tilt Speed	0xAF	XOR
Down	0xA0	Address	0x00	0x10	Pan Speed	Tilt Speed	0xAF	XOR
Left	0xA0	Address	0x00	0x04	Pan Speed	Tilt Speed	0xAF	XOR
Right	0xA0	Address	0x00	0x02	Pan Speed	Tilt Speed	0xAF	XOR
Upleft	0xA0	Address	0x00	0x0C	Pan Speed	Tilt Speed	0xAF	XOR
Upright	0xA0	Address	0x00	0x0A	Pan Speed	Tilt Speed	0xAF	XOR

DownLeft	0xA0	Address	0x00	0x14	Pan Speed	Tilt Speed	0xAF	XOR
DownRight	0xA0	Address	0x00	0x12	Pan Speed	Tilt Speed	0xAF	XOR
Zoom In	0xA0	Address	0x00	0x20	0x00	0x00	0xAF	XOR
Zoom Out	0xA0	Address	0x00	0x40	0x00	0x00	0xAF	XOR
Stop	0xA0	Address	0x00	0x00	0x00	0x00	0xAF	XOR
Focus Far	0xA0	Address	0x01	0x00	0x00	0x00	0xAF	XOR
Focus Near	0xA0	Address	0x02	0x00	0x00	0x00	0xAF	XOR
Set Preset	0xA0	Address	0x00	0x03	0x00	Preset ID	0xAF	XOR
Clear Preset	0xA0	Address	0x00	0x05	0x00	Preset ID	0xAF	XOR
Call Preset	0xA0	Address	0x00	0x07	0x00	Preset ID	0xAF	XOR
Query Pan Position	0xA0	Address	0x00	0x51	0x00	0x00	0xAF	XOR
Query Pan Position Response	0xA0	Address	0x00	0x59	Value High Byte	Value Low Byte	0xAF	XOR
Query Tilt Position	0xA0	Address	0x00	0x53	0x00	0x00	0xAF	XOR
Query Tilt Position Response	0xA0	Address	0x00	0x5B	Value High Byte	Value Low Byte	0xAF	XOR
Query Zoom Position	0xA0	Address	0x00	0x55	0x00	0x00	0xAF	XOR
Query Zoom Position Response	0xA0	Address	0x00	0x5D	Value High Byte	Value Low Byte	0xAF	XOR

6. Maintenance and Troubleshooting

6.1 Camera Maintenance

- 1) If the camera will not be used for a long time, please turn off the power switch.
- 2) Use a soft cloth or lotion-free tissue to clean the camera body.
- 3) Use a soft dry lint-free cloth to clean the lens. If the camera is very dirty, clean it with a diluted neutral detergent. Do not use any type of solvent or harsh detergent, which may damage the surface.

6.2 Troubleshooting

1) No image displayed by video output

Solution:

- a, Check camera power for connection, and check if power indicator is lit.
- b, Power off, restart the device and check if it performs self inspection normally.
- c, Check if connection line of video output and video display functions.

2) Image is unstable

Solution:

Check if connection line of video output and video display functions.

3) Lens zoom image dithering

Solution:

- a, Check if camera is installed securely.
- b, Check if there is vibrating machine or object nearby the camera.

4) Remote control is out of service

Solution:

- a, Set remote control address to be 1, and check if it works (if the device restores to default, remote control address will be restored to 1)
- b, Check if remote control battery is installed or battery is low
- c, Check if menu exits. It only works when menu exits; if webpage outputs image, it will not display menu or perform any operation.

Menu exits in 30s automatically. Remote control works.

5) Serial port is out of control


Solution:

- a, Check if it is standard control line provided by our company.
- b, Check if serial port protocol, baud rate and address are consistent with camera
- c, Check if control line connects correctly.

6) Failure to log in webpage

Solution:

- a, Use display to check if camera outputs image normally
- b, Check if network cable connects correctly (flicker of yellow indicator at internet access means network cable connection is correct)
- c, Check if computer adds network segment and if network segment is consistent with camera IP address.
- d, Click “start” in computer, select “operate”, and enter cmd; click “confirm”, DOS command window appears; input ping 192.168.5.163” press Enter, information below means network connection functions well.

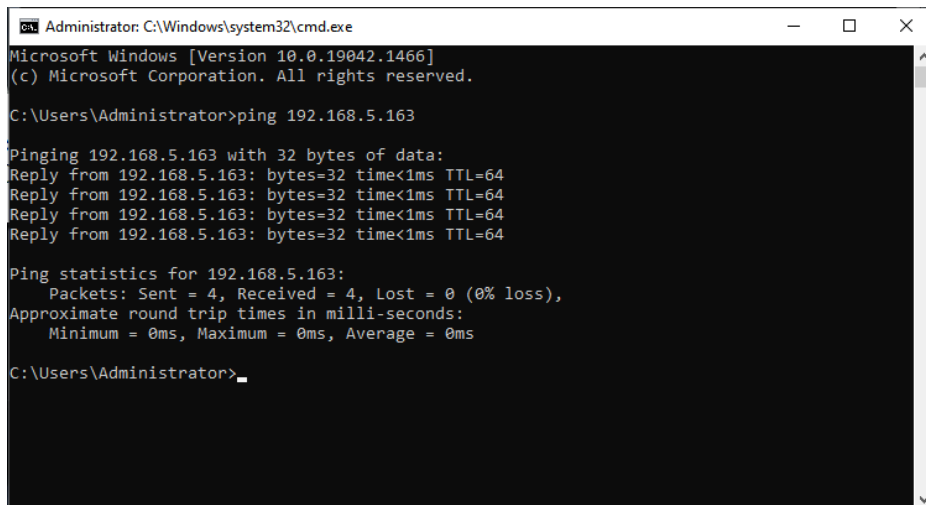

```
Administrator: C:\Windows\system32\cmd.exe
Microsoft Windows [Version 10.0.19042.1466]
(c) Microsoft Corporation. All rights reserved.

C:\Users\Administrator>ping 192.168.5.163

Pinging 192.168.5.163 with 32 bytes of data:
Reply from 192.168.5.163: bytes=32 time<1ms TTL=64
Reply from 192.168.5.163: bytes=32 time<1ms TTL=64
Reply from 192.168.5.163: bytes=32 time<1ms TTL=64
Reply from 192.168.5.163: bytes=32 time<1ms TTL=64

Ping statistics for 192.168.5.163:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

C:\Users\Administrator>
```

Figure 6-1 Network Connection Diagram